



**LG**

Life's Good

North/Latin America  
Europe/Africa  
Asia/Oceania

Internal Use Only

<http://aic.lgservice.com>  
<http://eic.lgservice.com>  
<http://biz.lgservice.com>

# LCD TV

# SERVICE MANUAL

**CHASSIS : LA05E**

**MODEL : 55LV555H 55LV555H-UA**

## **CAUTION**

BEFORE SERVICING THE CHASSIS,  
READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

**CONTENTS**

**CONTENTS ..... 2**

**SAFETY PRECAUTIONS ..... 3**

**SPECIFICATION ..... 6**

**ADJUSTMENT INSTRUCTION ..... 12**

**EXPLODED VIEW ..... 21**

**SVC. SHEET .....**

# SAFETY PRECAUTIONS

## IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by ⚠ in the Schematic Diagram and Exploded View.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

### General Guidance

An **isolation Transformer** should always be used during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and its components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1W), keep the resistor 10mm away from PCB.

Keep wires away from high voltage or high temperature parts.

### Before returning the receiver to the customer,

always perform an **AC leakage current check** on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

### Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between  $1M\Omega$  and  $5.2M\Omega$ .

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer.

### Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

### Do not use a line Isolation Transformer during this check.

Connect 1.5K/10watt resistor in parallel with a 0.15uF capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which corresponds to 0.5mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

### Leakage Current Hot Check circuit



# SERVICING PRECAUTIONS

**CAUTION:** Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the **SAFETY PRECAUTIONS** on page 3 of this publication.

**NOTE:** If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

## General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
  - a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
  - b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
  - c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.

**CAUTION:** A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.

2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe. Do not test high voltage by "drawing an arc".
3. Do not spray chemicals on or near this receiver or any of its assemblies.
4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10% (by volume) Acetone and 90% (by volume) isopropyl alcohol (90%-99% strength)  
**CAUTION:** This is a flammable mixture.  
Unless specified otherwise in this service manual, lubrication of contacts is not required.
5. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
6. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
7. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.  
Always remove the test receiver ground lead last.
8. *Use with this receiver only the test fixtures specified in this service manual.*

**CAUTION:** Do not connect the test fixture ground strap to any heat sink in this receiver.

## Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called *Electrostatically Sensitive (ES) Devices*. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the

unit under test.

2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.  
**CAUTION:** Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

## General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or 500°F to 600°F.
2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a mall wire-bristle (0.5 inch, or 1.25cm) brush with a metal handle. Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique
  - a. Allow the soldering iron tip to reach normal temperature. (500°F to 600°F)
  - b. Heat the component lead until the solder melts.
  - c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.  
**CAUTION:** Work quickly to avoid overheating the circuit board printed foil.
6. Use the following soldering technique
  - a. Allow the soldering iron tip to reach a normal temperature (500°F to 600°F)
  - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
  - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.  
**CAUTION:** Work quickly to avoid overheating the circuit board printed foil.
  - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

## IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

### Removal

1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

### Replacement

1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

## "Small-Signal" Discrete Transistor

### Removal/Replacement

1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

## Power Output, Transistor Device

### Removal/Replacement

1. Heat and remove all solder from around the transistor leads.
2. Remove the heat sink mounting screw (if so equipped).
3. Carefully remove the transistor from the heat sink of the circuit board.
4. Insert new transistor in the circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heat sink.

## Diode Removal/Replacement

1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicular y to the circuit board.
3. Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

## Fuse and Conventional Resistor

### Removal/Replacement

1. Clip each fuse or resistor lead at top of the circuit board hollow stake.
2. Securely crimp the leads of replacement component around notch at stake top.
3. Solder the connections.

**CAUTION:** Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

## Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

### At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
2. Carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

### At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

1. Remove the defective copper pattern with a sharp knife. Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side. Carefully crimp and solder the connections.

**CAUTION:** Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

# SPECIFICATION

NOTE : Specifications and others are subject to change without notice for improvement.

## 1. Application range

This spec sheet is applied all of the 32", 37", 42", 47", 55" LED LCD TV with LA05E chassis.

## 2. Requirement for Test

Each part is tested as below without special appointment.

- 1) Temperature: 20 °C ± 5 °C
- 2) Relative Humidity: 65 ± 10%
- 3) Power Voltage : Standard input voltage(100-120V~, 50/60Hz)  
\* Standard Voltage of each product is marked by models
- 4) Specification and performance of each parts are followed each drawing and specification by part number in accordance with BOM.
- 5) The receiver must be operated for about 20 minutes prior to the adjustment.

## 3. Test method

- 1) Performance: LGE TV test method followed
- 2) Demanded other specification
  - Safety : UL, CSA, IEC specification
  - EMC: FCC, ICES, IEC specification

## 4. General Specification(TV)

No	Item	Specification		Remark
1	Receivable System	VSB/64 & 256 QAM/ NTSC-M		
2	Available Channel	VHF : 02 ~ 13 UHF : 14 ~ 69 DTV : 02 ~ 69 CATV : 01 ~ 135 CADTV : 01 ~ 135		
3	Input Voltage	1) AC 100 ~ 120V 50/60Hz		
4	Market	North America		
5	Screen Size	32 / 37 / 42 inches		
6	Aspect Ratio	16:9		
7	Tuning System	FS		
8	LCD Module	EAJ61751501 V6 LC320EXN-SDA1		LG Philips LCD
		EAJ61751801 V6 LC370EUN-SDV2		LG Philips LCD
		EAJ61751705 V6 LC420EUN-SDV3		LG Philips LCD
		EAJ61751601 V6 LC470EUE-SDV1		LG Philips LCD
		EAJ61768501 V6 LC550EUF-SDA1		LG Philips LCD
9	Operating Environment	Temp : 0 ~ 40 deg Humidity : ~ 80 %		
10	Storage Environment	Temp : -20 ~ 60 deg Humidity : -85 %		

## 5. Chrominance & Luminance

### 5.1. 32LV555H-UA, V6

No.	Item			Min	Typ	Max	Unit	Remarks
1	Max Luminance (Center 1-point / Full White Pattern)	Module		300	380		cd/m²	
		Set		250	300			
2	Luminance uniformity			77				5point
3	Color coordinate (Default)	RED	X	Typ. -0.03	0.637	Typ. +0.03		
			Y		0.341			
		GREEN	X		0.318			
			Y		0.606			
		BLUE	X		0.153			
			Y		0.057			
		WHITE	X		0.279			
			Y		0.292			
4	Contrast ratio			850:1	1200:1			
				15,000:1	20,000:1			Applied condition: vivid
6	Color Temperature	Cool		0.254	0.269	0.284		The W/B Tolerance is ±0.015 for Adjustment
				0.258	0.273	0.288		
		Medium		0.270	0.285	0.300		
				0.278	0.293	0.308		
		Warm		0.298	0.313	0.324		
				0.314	0.329	0.344		

### 5.2. 37LV555H-UA, V6

No.	Item			Min	Typ	Max	Unit	Remarks
1	Max Luminance (Center 1-point / Full White Pattern)		Module	290	360		cd/m²	
			Set	250	300			
2	Luminance uniformity			77				5point
3	Color coordinate (Default)	RED	X	Typ. -0.03	0.637	Typ. +0.03		
			Y		0.341			
		GREEN	X		0.319			
			Y		0.605			
		BLUE	X		0.154			
			Y		0.051			
		WHITE	X		0.279			
			Y		0.292			
4	Contrast ratio			1000:1	1400:1			
				15,000:1	20,000:1			Applied condition: vivid
6	Color Temperature	Cool		0.254	0.269	0.284		The W/B Tolerance is ±0.015 for Adjustment
				0.258	0.273	0.288		
		Medium		0.270	0.285	0.300		
				0.278	0.293	0.308		
		Warm		0.298	0.313	0.324		
				0.314	0.329	0.344		

### 5.3. 42LV555H-UA, V6

No.	Item			Min	Typ	Max	Unit	Remarks
1	Max Luminance (Center 1-point / Full White Pattern)	Module		290	360		cd/m²	
		Set		250	300			
2	Luminance uniformity			77				5point
3	Color coordinate (Default)	RED	X	Typ. -0.03	0.637	Typ. +0.03		
			Y		0.341			
		GREEN	X		0.325			
			Y		0.600			
		BLUE	X		0.152			
			Y		0.051			
		WHITE	X		0.279			
			Y		0.292			
4	Contrast ratio			1000:1	1400:1			
				15,000:1	20,000:1			Applied condition: vivid
6	Color Temperature	Cool		0.254	0.269	0.284		The W/B Tolerance is ±0.015 for Adjustment
				0.258	0.273	0.288		
		Medium		0.270	0.285	0.300		
				0.278	0.293	0.308		
		Warm		0.298	0.313	0.324		
				0.314	0.329	0.344		

### 5.4. 47LV555H-UA, V6

No.	Item			Min	Typ	Max	Unit	Remarks
1	Max Luminance (Center 1-point / Full White Pattern)	Module		290	360		cd/m²	
		Set		300	350			
2	Luminance uniformity			77				5point
3	Color coordinate (Default)	RED	X	Typ. -0.03	0.639	Typ. +0.03		
			Y		0.343			
		GREEN	X		0.316			
			Y		0.595			
		BLUE	X		0.152			
			Y		0.058			
		WHITE	X		0.279			
			Y		0.292			
4	Contrast ratio			1000:1	1400:1			
				15,000:1	20,000:1			Applied condition: vivid
6	Color Temperature	Cool		0.254	0.269	0.284		The W/B Tolerance is ±0.015 for Adjustment
				0.258	0.273	0.288		
		Medium		0.270	0.285	0.300		
				0.278	0.293	0.308		
		Warm		0.298	0.313	0.324		
				0.314	0.329	0.344		



## 5.5. 55LV555H-UA, V6

No.	Item			Min	Typ	Max	Unit	Remarks
1	Max Luminance (Center 1-point / Full White Pattern)	Module		320	400		cd/m²	
			Set	350	400			
2	Luminance uniformity			77				5point
3	Color coordinate (Default)	RED	X	Typ. -0.03	0.649	Typ. +0.03		
			Y		0.333			
		GREEN	X		0.308			
			Y		0.607			
		BLUE	X		0.150			
			Y		0.060			
		WHITE	X		0.279			
			Y		0.292			
4	Contrast ratio			1000:1	1400:1			
				15,000:1	20,000:1			Applied condition: vivid
6	Color Temperature	Cool		0.254	0.269	0.284		The W/B Tolerance is ±0.015 for Adjustment
				0.258	0.273	0.288		
		Medium		0.270	0.285	0.300		
				0.278	0.293	0.308		
		Warm		0.298	0.313	0.324		
				0.314	0.329	0.344		

## 6. Component Video Input (Y, CB/PB, CR/PR)

No	Resolution	H-freq(kHz)	V-freq.(kHz)	Pixel clock	Proposed
1.	720*480	15.73	60	13.5135	SDTV ,DVD 480I
2.	720*480	15.73	59.94	13.5	SDTV ,DVD 480I
3.	720*480	31.50	60	27.027	SDTV 480P
4.	720*480	31.47	59.94	27.0	SDTV 480P
5.	1280*720	45.00	60.00	74.25	HDTV 720P
6.	1920*1080	33.75	60.00	74.25	HDTV 1080I
7.	1920*1080	33.72	59.94	74.176	HDTV 1080I
8.	1920*1080	67.500	60	148.50	HDTV 1080P

## 7. RGB Input (PC)

No	Resolution	H-freq(kHz)	V-freq.(kHz)	Pixel clock	Proposed	
	PC					DDC
1.	640*350	31.468	70.09	25.17	EGA	X
2.	720*400	31.469	70.08	28.32	DOS	O
3.	640*480	31.469	59.94	25.17	VESA(VGA)	O
4.	640*480	37.861	72.80	31.50	VESA(VGA)	O
5.	800*600	37.879	60.31	40.00	VESA(SVGA)	O
6.	800*600	48.077	72.18	50.00	VESA(SVGA)	O
7.	1024*768	48.363	60.00	65.00	VESA(XGA)	O
8.	1024*768	56.476	70.06	75.00	VESA(XGA)	O
9.	1280*768	47.776	59.87	79.50	CVT(WXGA)	O
10.	1280*768	60.289	4.893	102.25	CVT(WXGA)	O
11.	1360*768	47.712	60.015	85.50	VESA(WXGA)	O
12.	1280*1024	63.981	60.020	108.00	VESA (SXGA)	O
13.	1280*1024	79.976	75.025	135	VESA (SXGA)	O
14.	1600*1200	75.000	60.000	162	VESA (UXGA)	X
15.	1920*1080	66.587	59.934	138.50	WUXGA (Reduced Blanking)	O

## 8. HDMI input (PC/DTV)

No	Resolution	H-freq(kHz)	V-freq.(kHz)	Pixel clock	Proposed	
	PC					DDC
1.	640*350	31.468	70.09	25.17	EGA	X
2.	720*400	31.469	70.08	28.32	DOS	O
3.	640*480	31.469	59.94	25.17	VESA(VGA)	X
4.	800*600	35.156	56.25	36.00	VESA(SVGA)	O
5.	800*600	37.879	60.31	40.00	VESA(SVGA)	O
6.	800*600	48.077	72.18	50.00	VESA(SVGA)	X
7.	800*600	46.875	75.00	49.50	VESA(SVGA)	X
8.	1024*768	48.363	60.00	65.00	VESA(XGA)	O
9.	1024*768	56.476	70.06	75.00	VESA(XGA)	X
10.	1024*768	60.023	75.02	78.75	VESA(XGA)	X
11.	1280*768	47.776	59.870	79.5	CVT(WXGA)	O
12	1360*768	47.712	60.015	85.50	VESA (WXGA)	O
13.	1280*1024	63.981	60.020	108.00	VESA (SXGA)	O
14.	1280*1024	79.976	75.025	135	VESA (SXGA)	X
15.	1600*1200	75.000	60.000	162	VESA (UXGA)	X
16.	1920*1080	67.500	60.000	148.50	HDTV 1080P	O
	DTV					
1	720*480	31.47	60	27.027	SDTV 480P	O
2	720*480	31.47	59.94	27.00	SDTV 480P	O
3	1280*720	45.00	60.00	74.25	HDTV 720P	O
4	1280*720	44.96	59.94	74.176	HDTV 720P	O
5	1920*1080	33.75	60.00	74.25	HDTV 1080I	O
6	1920*1080	33.72	59.94	74.176	HDTV 1080I	O
7	1920*1080	67.500	60	148.50	HDTV 1080P	O
8	1920*1080	67.432	59.939	148.352	HDTV 1080P	O
9	1920*1080	27.000	24.000	74.25	HDTV 1080P	O
10	1920*1080	26.97	23.976	74.176	HDTV 1080P	O
11	1920*1080	33.75	30.000	74.25	HDTV 1080P	O
12	1920*1080	33.71	29.97	74.176	HDTV 1080P	O



## 5. Manual Adjustment

 
### 5.1 ADC(Saturn5) Adjustment

#### 5.1.1 Overview

ADC adjustment is needed to find the optimum black level and gain

#### 5.1.2 Equipment & Condition

- 1) Adjust Remocon
- 2) 801GF(802B, 802F, 802R) or MSPG925FA Pattern Generator
  - Resolution: 480i, 1024\*768
  - Pattern : Horizontal 100% Color Bar Pattern
  - Pattern level: 0.7±0.1 Vp-p
  - Image



- 3) Must use standard cable

#### 5.1.3 Adjust method

##### 5.1.3.1 ADC 480i Comp1

- 1) Check connected condition of Comp1 cable to the equipment
- 2) Give a 480i Mode, Horizontal 100% Color Bar Pattern to Comp1.  
(MSPG-925FA -> Model: 209, Pattern: 65)
- 3) Change input mode as Component1 and picture mode as "Standard"
- 4) Press the In-start Key on the ADJ remote after at least 1 min of signal reception. Then, select 7. External ADC -> 1. COMP 480i on the menu. Press enter key. The adjustment will start automatically.
- 5) If ADC calibration is successful, "ADC RGB Success" is displayed. If ADC calibration is failure, "ADC RGB Fail" is displayed.
- 6) If ADC calibration is failure, after recheck ADC pattern or condition retry calibration Error message refer to

##### 5.1.3.2 ADC 1080p Comp1

- 1) Check connected condition of Comp1 cable to the equipment
- 2) Give a 1080p Mode, Horizontal 100% Color Bar Pattern to Comp1.  
(MSPG-925FA -> Model: 225, Pattern: 65)
- 3) Change input mode as Component1 and picture mode as "Standard"
- 4) Press the In-start Key on the ADJ remote after at least 1 min of signal reception. Then, select 7. External ADC -> 1. COMP 1080P on the menu. Press enter key. The adjustment will start automatically.
- 5) If ADC calibration is successful, "ADC RGB Success" is displayed. If ADC calibration is failure, "ADC RGB Fail" is displayed.
- 6) If ADC calibration is failure, after recheck ADC pattern or condition retry calibration Error message refer to

##### 5.1.3.2 ADC 1024\*768 RGB

- 1) Check connected condition of Component & RGB cable to the equipment
- 2) Give a 1024\*768 Mode, 100% Horizontal Color Bar Pattern to RGB port.  
(MSPG-925 Series model:60 , pattern:65 )
- 3) Change input mode as RGB and picture mode as "Standard"
- 4) Press the In-start Key on the ADJ remote after at least 1 min of signal reception. Then, select 7. External ADC -> 1. COMP 480i on the menu. Press enter key. The adjustment will start automatically.
- 5) If ADC calibration is successful, "ADC RGB Success" is displayed. If ADC calibration is failure, "ADC RGB Fail" is displayed.
- 6) If ADC calibration is failure, after recheck ADC pattern or condition retry calibration Error message refer to 5)

### 5.2. EDID (The Extended Display Identification Data) / DDC (Display Data Channel) download

Reference : Download is only possible in POWER ONLY MODE

#### 5.2.1 Overview

It is a VESA regulation. A PC or a MNT will display an optimal resolution through information sharing without any necessity of user input. It is a realization of "Plug and Play"

#### 5.2.2 Equipment

- Since embedded EDID data is used, EDID download JIG, HDMI cable and D-sub cable are not need.
- Adjust remocon

#### 5.2.3 Download method

- 1) Press Adj. key on the Adj. R/C,
- 2) Select EDID D/L menu.
- 3) By pressing Enter key, EDID download will begin
- 4) If Download is successful, OK is display, but If Download is failure, NG is displayed.
- 5) If Download is failure, Re-try download.

- Caution) When EDID Download, must remove RGB/HDMI Cable.

## 5.2.4 EDID DATA

- HDMI I [C/S: F591]

EDID Block 0 table =

Manufacturer		Total		Block(0) = EDID												
GSM		Blocks (2)		Block(1) = CEA Ext v3												
Product Code																
0001																
Version 1		Revision 3														
	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00	00	FF	FF	FF	FF	FF	FF	00	1E	6D	01	00	01	01	01	01
10	01	13	01	03	80	73	41	78	0A	CF	74	A3	57	4C	B0	23
20	09	48	4C	A1	08	00	A9	40	01	00	01	40	45	40	31	40
30	01	01	01	01	01	01	02	3A	80	18	71	38	2D	40	58	2C
40	45	00	7E	8A	42	00	00	1E	01	1D	00	72	51	00	1E	20
50	6E	28	55	00	C4	0E	21	00	00	1E	00	00	00	FD	00	39
60	3F	1F	52	10	00	0A	20	20	20	20	20	20	20	00	00	FC
70	00	4C	47	20	54	56	0A	20	20	20	20	20	20	20	01	F5

EDID Block 1 table =

Manufacturer

GSM

Product Code

0001

Tag

02

Version

3

Total Blocks (2)

Block(0) = EDID

Block(1) = CEA Ext v3

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00	02	03	18	F1	47	10	22	20	05	84	03	02	23	09	07	07
10	67	03	0C	00	20	00	00	80	02	3A	80	18	71	38	2D	40
20	58	2C	04	05	7E	8A	42	00	00	1E	01	1D	80	18	71	1C
30	18	20	58	2C	25	00	7E	8A	42	00	00	9E	01	1D	00	72
40	51	00	1E	20	6E	28	55	00	7E	8A	42	00	00	1E	8C	0A
50	00	8A	20	E0	2D	10	10	3E	98	00	7E	8A	42	80	00	18
60	26	36	00	A0	70	38	1F	40	30	20	25	00	7E	8A	42	00
70	00	1A	00	00	00	00	00	00	00	00	00	00	00	00	00	81

- RGB [C/S: DE]

EDID Block 0 table =

Manufacturer		Total		Block(0) = EDID												
GSM		Blocks (2)		Block(1) = CEA Ext v3												
Product Code																
0001																
Tag		Version														
02		3														
	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00	02	03	18	F1	47	10	22	20	05	84	03	02	23	09	07	07
10	67	03	0C	00	10	00	00	80	02	3A	80	18	71	38	2D	40
20	58	2C	04	05	7E	8A	42	00	00	1E	01	1D	80	18	71	1C
30	16	20	58	2C	25	00	7E	8A	42	00	00	9E	01	1D	00	72
40	51	00	1E	20	6E	28	55	00	7E	8A	42	00	00	1E	8C	0A
50	00	8A	20	E0	2D	10	10	3E	98	00	7E	8A	42	00	00	18
60	26	36	00	A0	70	38	1F	40	30	20	25	00	7E	8A	42	00
70	00	1A	00	00	00	00	00	00	00	00	00	00	00	00	00	81

Manufacturer		Total		Block(0) = EDID												
OSM		Blocks (1)														
Product Code																
0002																
Tag		Version														
1		3														
	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00	00	FF	FF	FF	FF	FF	FF	00	1E	6D	02	00	01	01	01	01
10	01	13	01	03	68	73	41	78	0A	CF	74	A3	57	4C	B0	23
20	09	48	4C	A1	08	00	A9	40	01	00	01	40	45	40	31	40
30	01	01	01	01	01	01	02	3A	80	18	71	38	2D	40	58	2C
40	45	00	7E	8A	42	00	00	1E	01	1D	00	72	51	00	1E	20
50	40	70	36	00	C4	0E	21	00	00	1E	00	00	00	FD	00	39
60	3F	1F	52	10	00	0A	20	20	20	20	20	20	20	00	00	FC
70	00	4C	47	20	54	56	0A	20	20	20	20	20	20	20	00	DE

- HDMI III [C/S: F581]

EDID Block 0 table =

Manufacturer

GSM

Total Blocks (2)

Block(0) = EDID

Block(1) = CEA Ext v3

Product Code

0001

Version 1

Revision 3

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00	00	FF	FF	FF	FF	FF	FF	00	1E	6D	01	00	01	01	01	01
10	01	13	01	03	80	73	41	78	0A	CF	74	A3	57	4C	B0	23
20	09	48	4C	A1	08	00	A9	40	01	00	01	40	45	40	31	40
30	01	01	01	01	01	01	02	3A	80	18	71	38	2D	40	58	2C
40	45	00	7E	8A	42	00	00	1E	01	1D	00	72	51	00	1E	20
50	6E	28	55	00	C4	0E	21	00	00	1E	00	00	00	FD	00	39
60	3F	1F	52	10	00	0A	20	20	20	20	20	20	20	00	00	FC
70	00	4C	47	20	54	56	0A	20	20	20	20	20	20	20	01	F5

### 5.3. White Balance Adjustment

#### (1) Overview


- W/B adj. Objective & How-it-works
  - Objective: To reduce each Panel's W/B deviation
  - How-it-works: When R/G/B gain in the OSD is at 192, it means the panel is at its Full Dynamic Range. In order to prevent saturation of Full Dynamic range and data, one of R/G/B is fixed at 192, and the other two is lowered to find the desired value.
- Adj. condition : normal temperature
  - Surrounding Temperature: 25±5°C
  - Warm-up time: About 5 Min
  - Surrounding Humidity: 20% ~ 80%

#### (2) Equipment

- Color Analyzer: CA-210 (NCG: CH 9 / WCG: CH12)
- Adj. Computer(During auto adj., RS-232C protocol is needed)
- Adjust Remocon
- Video Signal Generator MSPG-925F 720p/216-Gray (Model:217, Pattern:78)
  - > Only when internal pattern is not available

- Color Analyzer Matrix should be calibrated using CS-1000

#### (3) Equipment connection MAP

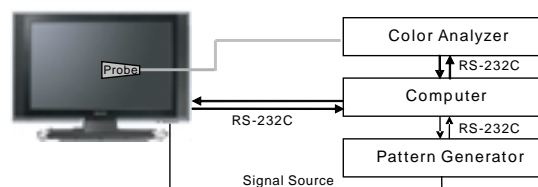

Connection Diagram of Automatic Adjustment

#### (4) Adj. Command (Protocol)

- RS-232C Command used during auto-adj.

RS-232C COMMAND			Meaning
[CMD]	ID	DATA]	
wb	00	00	Begin White Balance adj.
wb	00	ff	End White Balance adj.(Internal pattern disappeared)

- Ex) wb 00 00 -> Begin white balance auto-adj.  
 wb 00 10 -> Gain adj.  
 ja 00 ff -> Adj. data  
 jb 00 c0  
 ...  
 ...  
 wb 00 1f -> Gain adj. complete  
 \*(wb 00 20(start), wb 00 2f(end)) -> Off-set adj.  
 wb 00 ff -> End white balance auto adj.

#### 2) Adjustment Map

Applied Model : LA02B Chassis ALL MODELS

	ITEM	Command		Data Range (Hex.)		Default (Decimal)
		Cmd 1	Cmd 2	Min	Max	
Cool	R-Gain	j	g	00	C0	
	G-Gain	j	h	00	C0	
	B-Gain	j	i	00	C0	
	R-Cut					
	G-Cut					
	B-Cut					
Medium	R-Gain	j	a	00	C0	
	G-Gain	j	b	00	C0	
	B-Gain	j	c	00	C0	
	R-Cut					
	G-Cut					
	B-Cut					
Warm	R-Gain	j	d	00	C0	
	G-Gain	j	e	00	C0	
	B-Gain	j	f	00	C0	
	R-Cut					
	G-Cut					
	B-Cut					

#### (5) Auto adj. method

- Set TV in adj. mode using POWER ON key
- Zero calibrate probe then place it on the center of the Display
- Connect Cable(RS-232C)
- Select mode in adj. Program and begin adj.
- When adj. is complete (OK Sing), check adj. status pre mode (Warm, Medium, Cool)
- Remove probe and RS-232C cable to complete adj.

\* W/B Adj. must begin as start command "wb 00 00" , and finish as end command "wb 00 ff", and Adj. offset if need

#### (6) Manual adj. method

- Set TV in Adj. mode using POWER ON
- Zero Calibrate the probe of Color Analyzer, then place it on the center of LCD module within 10cm of the surface..
- Press ADJ key -> EZ adjust using adj. R/C > 6. White-Balance then press the cursor to the right (KEY $\odot$ ). (When KEY $\odot$  is pressed 216 Gray internal pattern will be displayed)
- One of R Gain / G Gain / B Gain should be fixed at 192, and the rest will be lowered to meet the desired value.
- Adj. is performed in COOL, MEDIUM, WARM 3 modes of color temperature.

- If internal pattern is not available, use RF input. In EZ Adj. menu 6.White Balance, you can select one of 2 Test-pattern: ON, OFF. Default is inner(ON). By selecting OFF, you can adjust using RF signal in 216 Gray pattern.



\* Adj. condition and cautionary items

- 1) Lighting condition in surrounding area  
Surrounding lighting should be lower 10 lux. Try to isolate adj. area into dark surrounding.
- 2) Probe location  
- LCD: Color Analyzer (CA-210) probe should be within 10cm and perpendicular of the module surface (80°~ 100°)
- 3) Aging time  
- After Aging Start, Keep the Power ON status during 5 Minutes.  
- In case of LCD, Back-light on should be checked using no signal or Full-white pattern.

(7) Reference (White Balance Adj. coordinate and color temperature)

1) W/B Equipment condition

CA210 CCFL/EEFL -> CH9, Test signal, Inner pattern(80IRE)

LED(AUO) -> CH14, Test signal, Inner pattern(80IRE)

2) Above 5 minutes H/run in the inner pattern. ("Powre on" key of adjust remote control)

Color Temperature	Cool	13,000k	K	X=0.269(±0.002) Y=0.273(±0.002)	<Test Signal> Inner pattern (204gray, 80IRE)
	Medium	9,300k	K	X=0.285(±0.002) Y=0.293(±0.002)	
	Warm	6,500k	K	X=0.313(±0.002) Y=0.329(±0.002)	

• Edge LED W/B Table in process of time(Only LGD module)

CA210 : CH14, Test signal : Inner pattern(80IRE)

GP2	Aging Time (Min)	Cool		Medium		Warm	
		x	y	x	y	x	y
		269	273	285	293	313	329
1	0-2	279	288	295	308	319	338
2	3-5	278	286	294	306	318	336
3	6-9	277	285	293	305	317	335
4	10-19	276	283	292	303	316	333
5	20-35	274	280	290	300	314	330
6	36-49	272	277	288	297	312	327
7	50-79	271	275	287	295	311	325
8	80-149	270	274	286	294	310	324
9	Over 150	269	273	285	293	309	323

## 5.4. HDCP (High-Bandwidth Digital Contents Protection) SETTING


- HDCP setting is not necessary in This Chassis.

## 5.5 MAC Address Download

For downloading the MAC address which be allotted on each LAN Card.

### 5.5.1 Adjustment Method

- 1) Connecting the TV set and the PC which has MAC Address Writing program through The RS232C cable.
- 2) Editing the macaddress.txt  
(Inserting start MAC address at top low. )  
(Inserting start MAC address at bottom low. )  
Launch MAC Address Writing program and set just like below picture.(1)

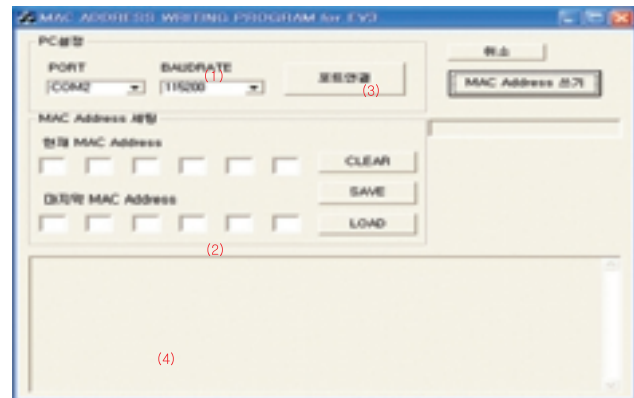

- 3) Click the LOAD button for reading the MAC address.(2)  
(SAVE : Saving the current MAC Address  
CLEAR : Initializing the space which insert MAC Address. )
- 4) Click the " MAC Address" button to write current MAC Address.(3)
- 5) In case of being downloaded normally, you can see the (4) message with " OK" in the window.
- 6) In case of being downloaded normally, MAC address increased one by one automatically. So the next set, just click the " MAC Address, " button after connecting the port.  
(Whenever be finished, the program saves the MAC Address in " macaddress.txt" file automatically.)



## 5.6 PING Test

\* For confirm works normally the LAN card through PING TEST.


### 5.6.1 Adjustment Method (PCB Ass'y Level)

- 1) Connecting the LAN to Ass'y and then turn on the Power.
- 2) Press the ADJ Key in the adjustment remote controller.
- 3) Press the " 11. ACAP PING TEST" in EZ ADJUST menu to check the Network works well.

### 5.6.2 Adjustment Method (Ass'y Line Level)

- 1) Connecting the LAN port in SET to the PC which has the PING Test program through a Cross LAN Cable. (PC LAN IP setting : 12.12.2.3)
- 2) Launch the PING Test program and confirm the program Setting. (Checking the TV' s IP is set 12.12.2.2 in program. Don' t check the Modem.)
- 3) Press the Power Only Key in the adjustment remote controller. (Setting the TV IP)
- 4) Click the " RUN" button of program, and then program display " OK" or " NG" like a below picture.

\* For clear the IP setting after the adjustment, press the INSTOP button.

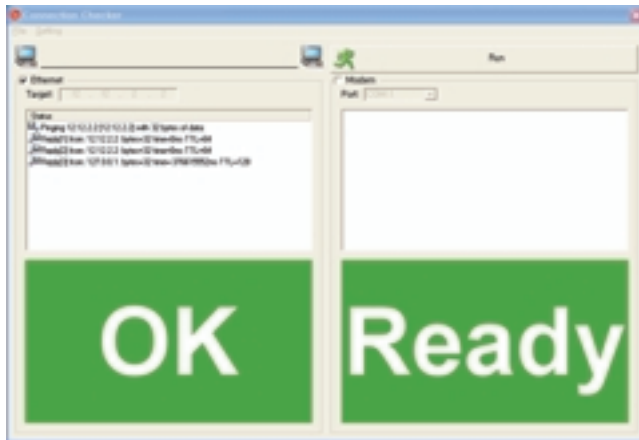

## 5.7 Option selection per country

### 5.7.1 Overview

- Option selection is only done for models in Non-USA North America due to rating
- Applied model: LA05A Chassis applied None USA model(CANADA, MEXICO)

### 5.7.2 Method

- 1) Press ADJ key on the Adj. R/C, then select Country Group Meun
- 2) Depending on destination, select KR or US, then on the lower Country option, select US, CA, MX. Selection is done using +, - KEY

## 5.8 Tool Option selection

- Method : Press Adj. key on the Adj. R/C, then select Tool option.

Model	Tool 1	Tool 2	Tool 3	Tool 4	Menu
32LV555H	18180	1576	35112	544	2 HDMI, CAN Tuner, 2 RCA
37LV555H	22276	1576	35112	544	2 HDMI, CAN Tuner, 2 RCA
42LV555H	26372	1576	35112	544	2 HDMI, CAN Tuner, 2 RCA
47LV555H	34564	1576	35112	544	2 HDMI, CAN Tuner, 2 RCA
55LV555H	46852	1576	35112	544	2 HDMI, CAN Tuner, 2 RCA

## 5.9 hip-out mode check (In-stop)

- After final inspection, press In-Stop key of the Adj. R/C and check that the unit goes to Stand-by mode.
- After final inspection, Always turn on the Mechanical S/W.

## 6. GND and Internal Pressure check

### 6.1. Method

- 1) GND & Internal Pressure auto-check preparation
  - Check that Power Cord is fully inserted to the SET. (If loose, re-insert)
- 2) Perform GND & Internal Pressure auto-check
  - Unit fully inserted Power cord, Antenna cable and A/V arrive to the auto-check process.
  - Connect D-terminal to AV JACK TESTER
  - Auto CONTROLLER(GWS103-4) ON
  - Perform GND TEST
  - If NG, Buzzer will sound to inform the operator.
  - If OK, changeover to I/P check automatically. (Remove CORD, A/V form AV JACK BOX)
  - Perform I/P test
  - If NG, Buzzer will sound to inform the operator.
  - If OK, Good lamp will lit up and the stopper will allow the pallet to move on to next process.

### 6.2. Checkpoint

- TEST voltage
  - GND: 1.5KV/min at 100mA
  - SIGNAL: 3KV/min at 100mA
- TEST time: 1 second
- TEST POINT
  - GND TEST = POWER CORD GND & SIGNAL CABLE METAL GND
  - Internal Pressure TEST = POWER CORD GND & LIVE & NEUTRAL
- LEAKAGE CURRENT: At 0.5mArms

## 7. Audio

No	Item	Min	Typ	Max	Unit	
1.	Audio practical max Output, L/R (Distortion=10% max Output)	9.0	10.0	12.0	W	EQ Off AVL Off Clear Voice Off
		8.5	8.9	9.8	Vrms	
2.	Speaker (8Ω Impedance)		TDB	TDB	W	EQ On AVL On Clear Voice On

Measurement condition:


1. RF input : Mono, 1KHz sine wave signal, 100% Modulation
2. CVBS, Component : 1KHz sine wave signal 0.4Vrms
3. RGB PC : 1KHz sine wave signal 0.7Vrms

## 8. Etc



	Power Status	
	Main B/D Shipping Condition	AC Switchch condtion
Chassis Module Assembly	ON	N/A
Front Module Assembly	N/A	OFF
Factory incoming	ON	OFF
Final Assembly	ON	ON
Ship-Out	OFF	ON

## 9. USB S/W Download (option)

- (1) Put the USB Stick to the USB socket
- (2) Automatically detecting update file in USB Stick  
- If your downloaded program version in USB Stick is Low, it didn't work.  
But your downloaded version is High, USB data is automatically detecting
- (3) Show the message "Copying files from memory"

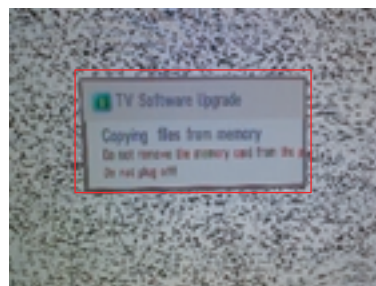


- (4) Updating is starting.

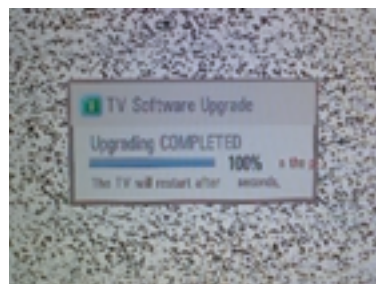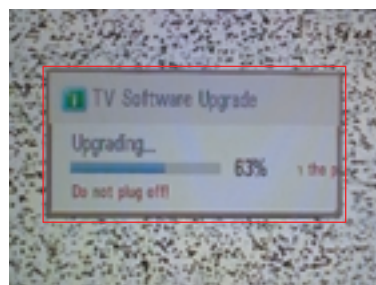

- (5) Updating Completed, The TV will restart automatically
  - (6) If your TV is turned on, check your updated version and Tool option. (explain the Tool option, next stage)  
\* If downloading version is more high than your TV have, TV can lost all channel data. In this case, you have to channel recover. if all channel data is cleared, you didn't have a DTV/ATV test on production line.
- \* After downloading, have to adjust TOOL OPTION again.
- 1) Push "IN-START" key in service remote controller.
  - 2) Select "Tool Option 1" and Push "OK" button.
  - 3) Punch in the number. (Each model has their number.)

## 10. Checking the EYE-Q operation.

- Step 1) Press the EYE Key on the Adjustment remote controller.
- Step 2) Screen the Eye Q sensor in front of the TV by hands, and keep up about 6 seconds.
- Step 3) Checking "Lux" value is changed less than "100", or not. If the values are not changed, exchange the sensor unit by soldering.
- Step 4) Pull out the hands, keep up about 6 seconds.
- Step 5) Checking "Lux" value increase from "50", or not. If the values are not changed, exchange the sensor unit by soldering.

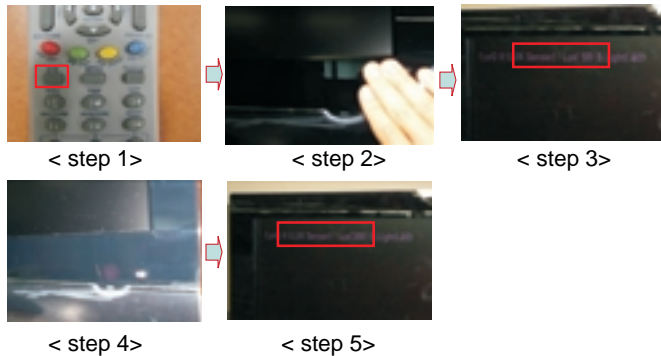

## 11. Test factor for commercial model

### 11.1 MPI Communication check

- 1) By pressing button "Still" of adjust remote-control, b-LAN shall be on.
- 2) Insert Game controller(RJ12 Cable) into "GAME CONTORL/MPI" of MPI REAR\_DECO.
- 3) If index color is green it's "PASS", if red "NG"
- 4) By pressing button " Still" of adjust remote-control, b-LAN shall be off.
- 4) If you find any problem. press <EYE> button and retest.


## 11.3 b\_LAN Main board Check

### 11.3.1 Overview

It is LNET RF modem & FTG card

### 11.3.2 Equipment

- 1) b\_LAN Checker: UTC-1000 (with Cable accessory)
- 2) Computer(for test result monitoring)
- 3) Connection JIG

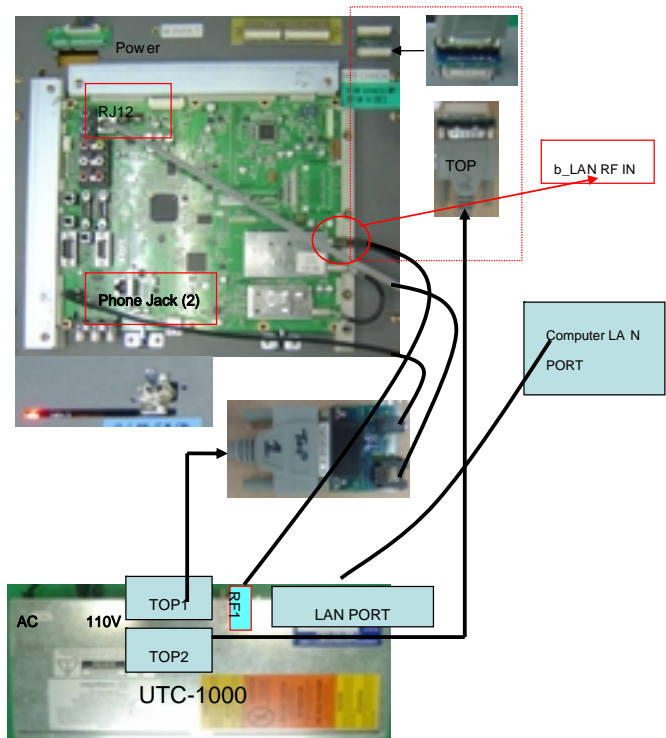

### 4) Check

#### 1. Setting Procedure

##### 1) Setting JIG

- (1) Connect UTC-1000 Equipment to JIG device as a like left picture

- Connection Line:

UTC-1000 TOP1 <--> Game port(RJ21)  
-> TV-LINK CFG (Phone Jack)

UTC-1000 TOP2 <--> JIG 11pin Connection

UTC-1000 RF1 <--> b\_LAN RF IN

UTC-1000 LAN <--> PC LAN Port

#### 2. Working procedure

##### 1) Connection

UTC-1000 LAN <--> PC LAN Port

UTC-1000 TOP1 <--> Game port(RJ21)

-> TV-LINK CFG (Phone Jack)

UTC-1000 RF1 <--> b\_LAN RF IN

##### 2) Power on JIG

##### 3) Test Start

UTC-1000 TOP2 <--> JIG 11pin Connection

##### 4) Checking b-LAN MAC Address

Check whether it is same their address numbers or not between B-LAN Label and on the pc address numbers.



\* Checking JIG contents

1. Check whether displaying all "Pass" or not at the number 3.4.6.7.9 contents of UTC-1000 on the PC
2. Check "Version 6.0" of the 1. b\_LAN Application version
3. Check whether it is same their address numbers or not between B-LAN Label and 2. MAC Address on the pc.

## 12. Default Value in Adjustment mode

(Default values maybe modified during E/S & L/P Event for adjustment time reduction. But, it will be fixed before Mass Production)

## 13. Serial number download.

Connect Bar Code scan equipment and TV set by RS-232C cable.

- 1) E2PROM Data Write

CMD	LENGTH	ID_1	ID_2	DATA_1	...	DATA_N	CR
-----	--------	------	------	--------	-----	--------	----

♦ CMD : A0h  
 ♦ LENGTH : 85 ~ 94h(1~16 BYTES)  
 ♦ ID\_1 : 73h('s')  
 ♦ ID\_2 : 1) Serial Number - 61h('a') 2) Model Name - 62h('b')  
 ♦ CR : 0Dh  
 ♦ RETURN : A0h + CR

- 2) E2PROM Data Read


CMD	LENGTH	ID_1	ID_2	CR
-----	--------	------	------	----






♦ CMD : A1h  
 ♦ LENGTH : 85 ~ 94h(1~16 BYTES)  
 ♦ ID\_1 : 73h('s')  
 ♦ ID\_2 : 1) Serial Number - 61h('a') 2) Model Name - 62h('b')  
 ♦ CR : 0Dh  
 ♦ RETURN : DATA + CR

# EXPLODED VIEW

## IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by ⚠ in the Schematic Diagram and EXPLODED VIEW. It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards. Do not modify the original design without permission of manufacturer.

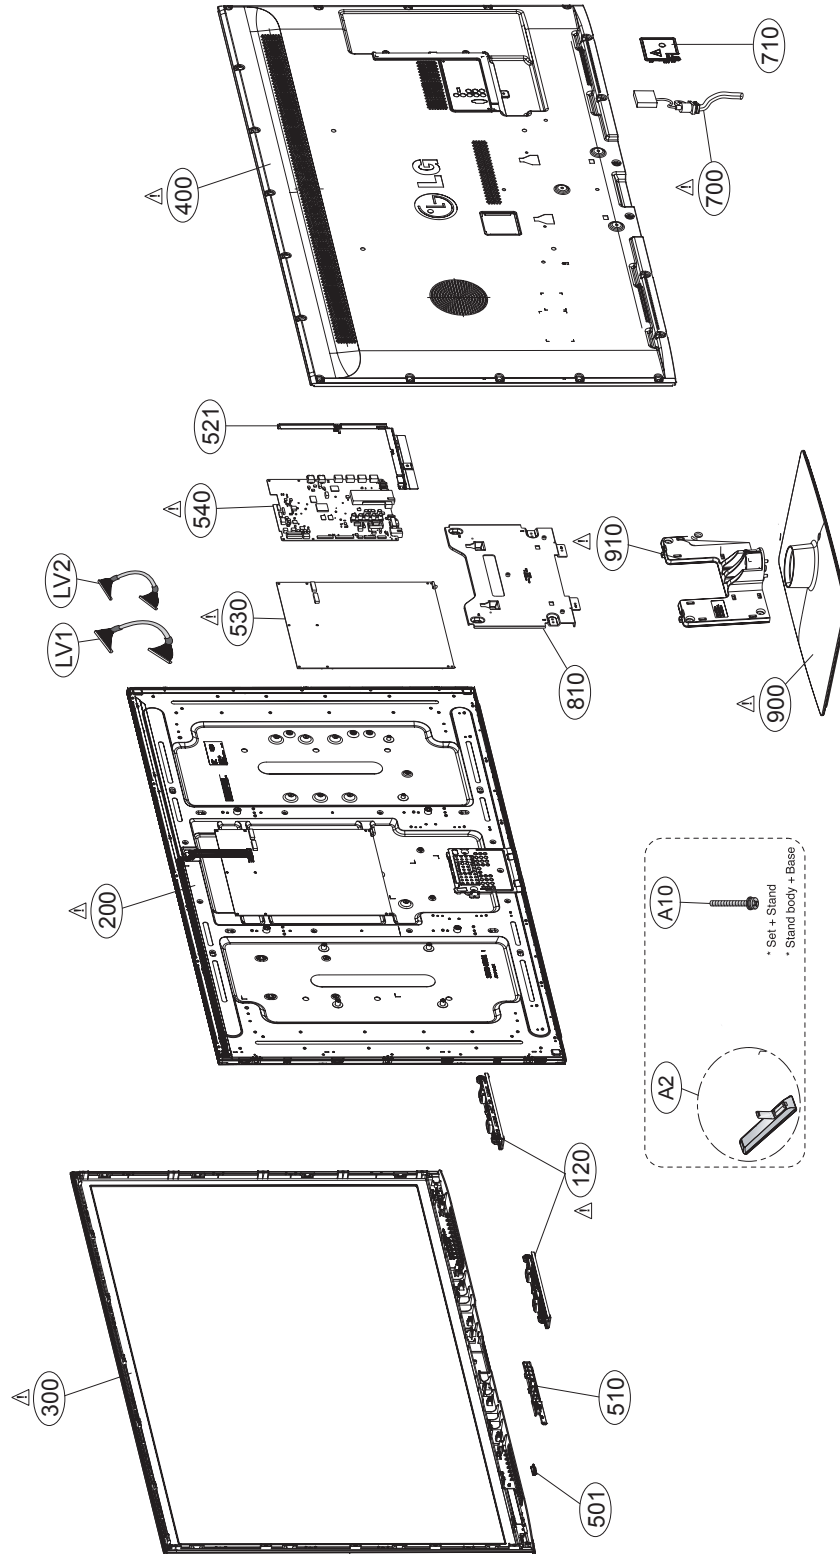

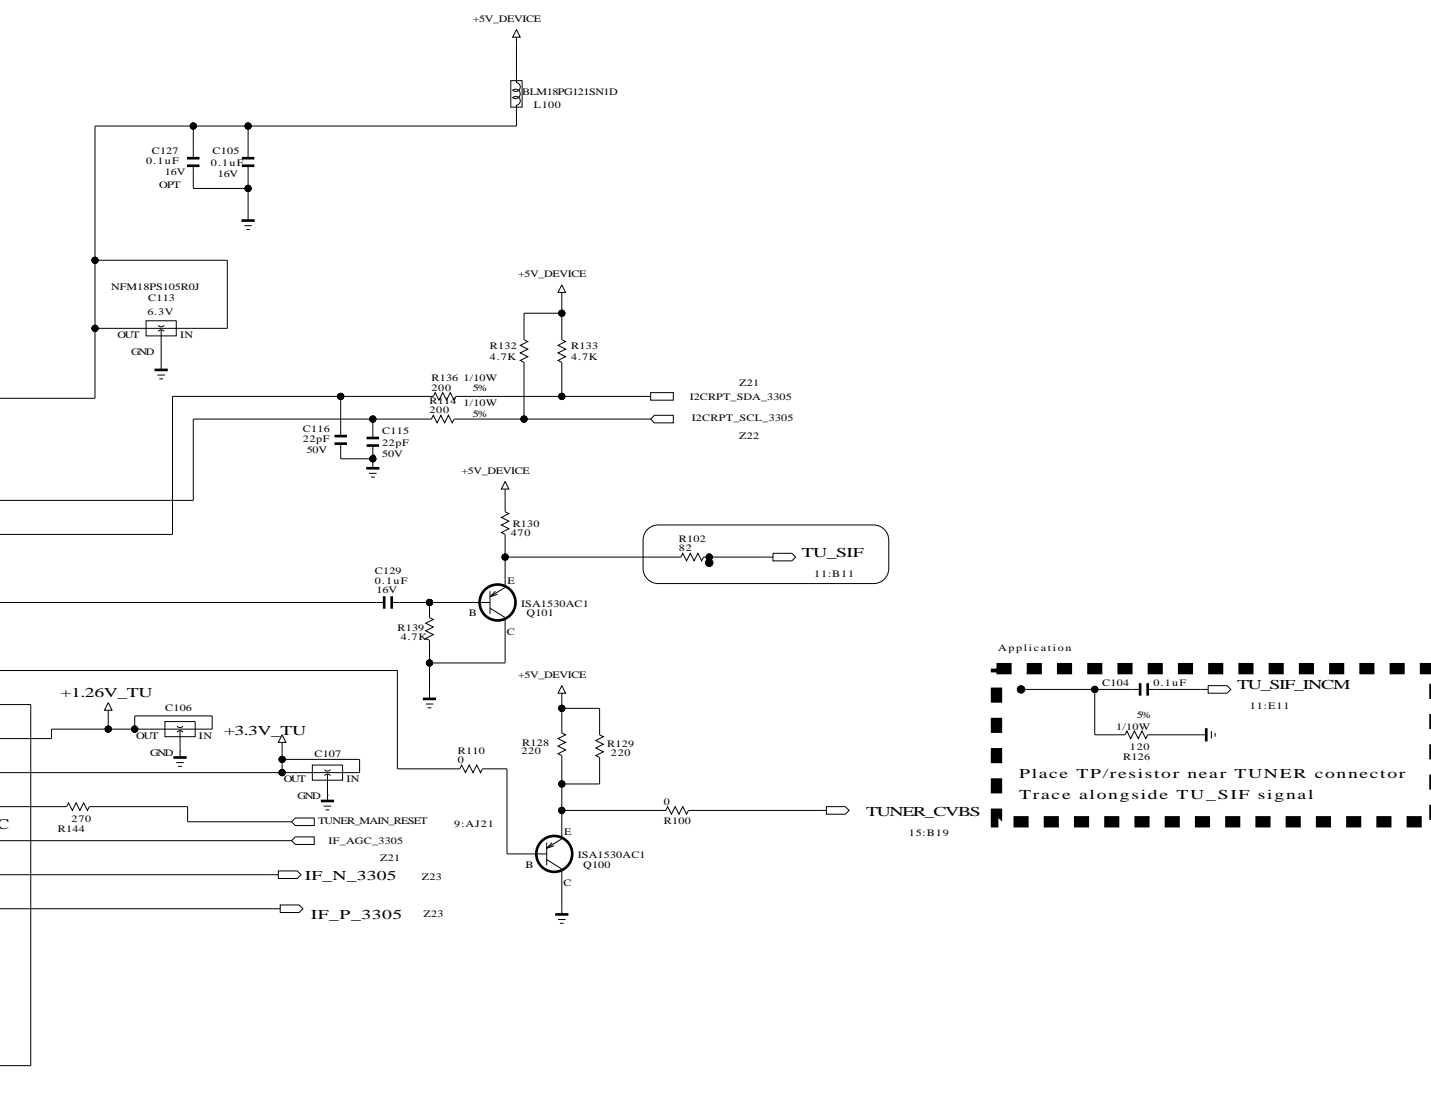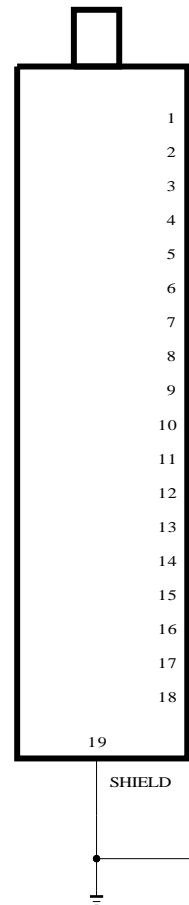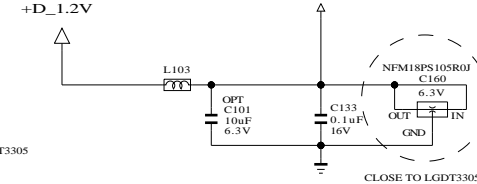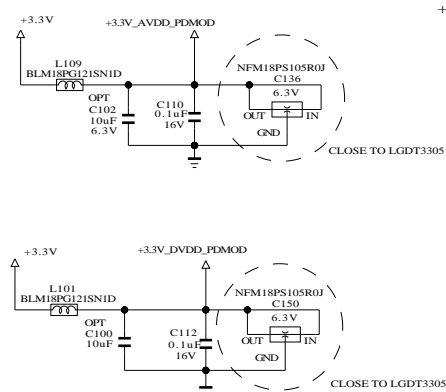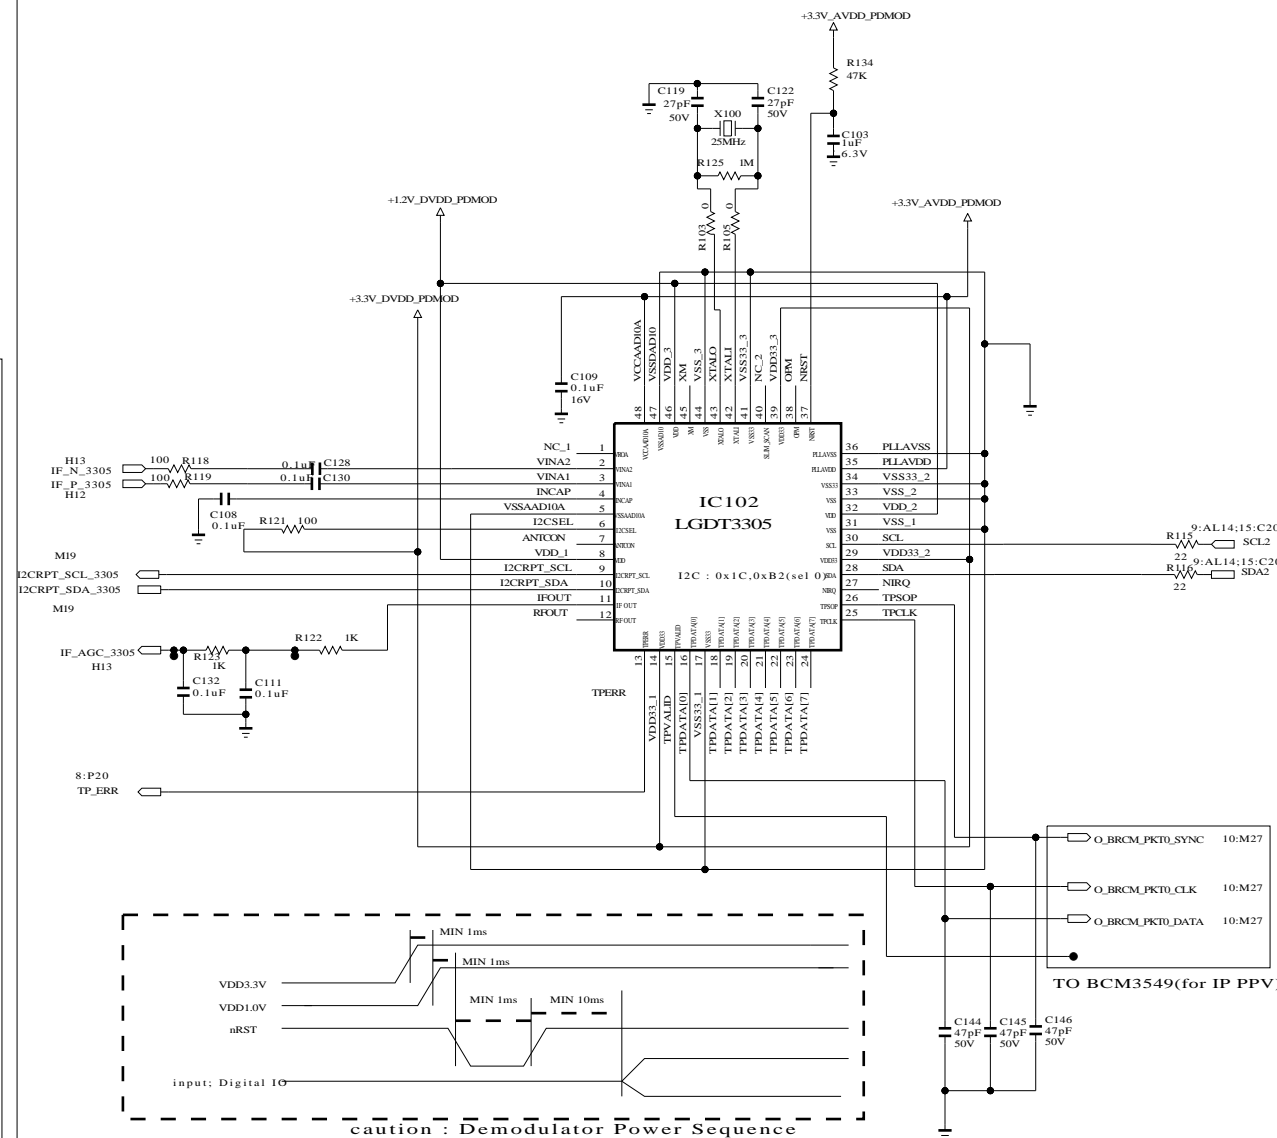


Application

Place TP/resistor near TUNER connector


Trace alongside TU\_SIF signal





## HDMI\_0 (Side)

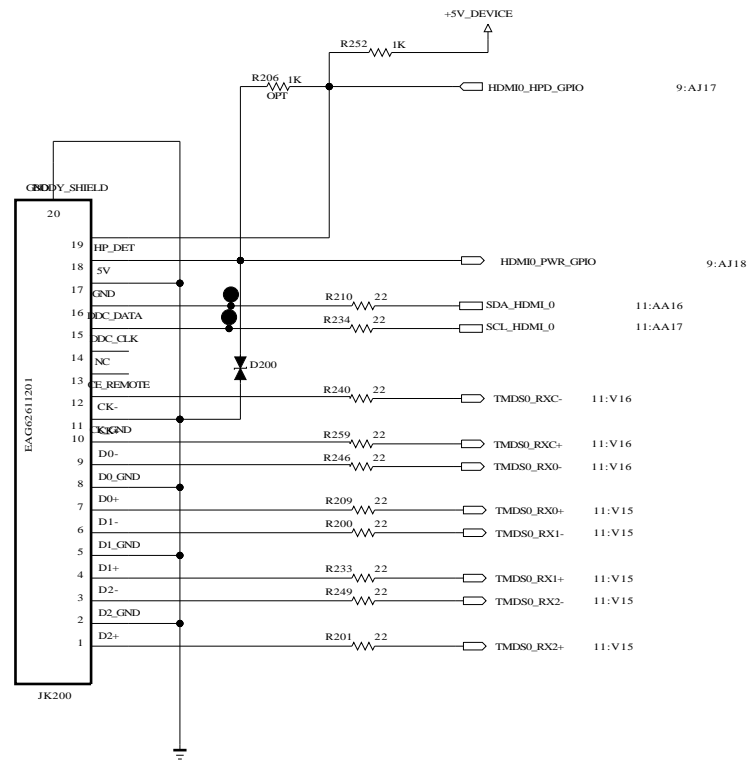

## HDMI\_1 (Rear)

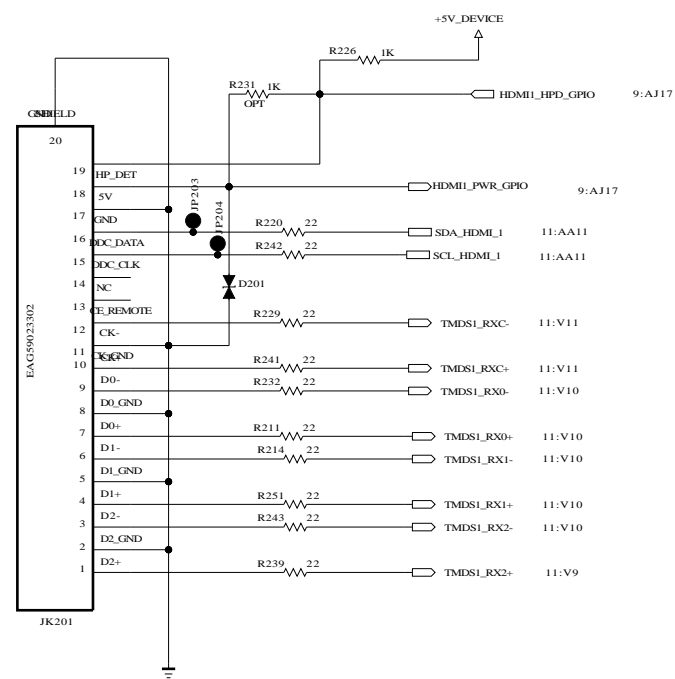

  THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.


SECRET

LG Electronics

 LG ELECTRONICS



MODEL	LV555H-UA	DATE	2010.12.10
BLOCK	HDMI	SHEET	2 / 18

# PWM AUDIO AMP

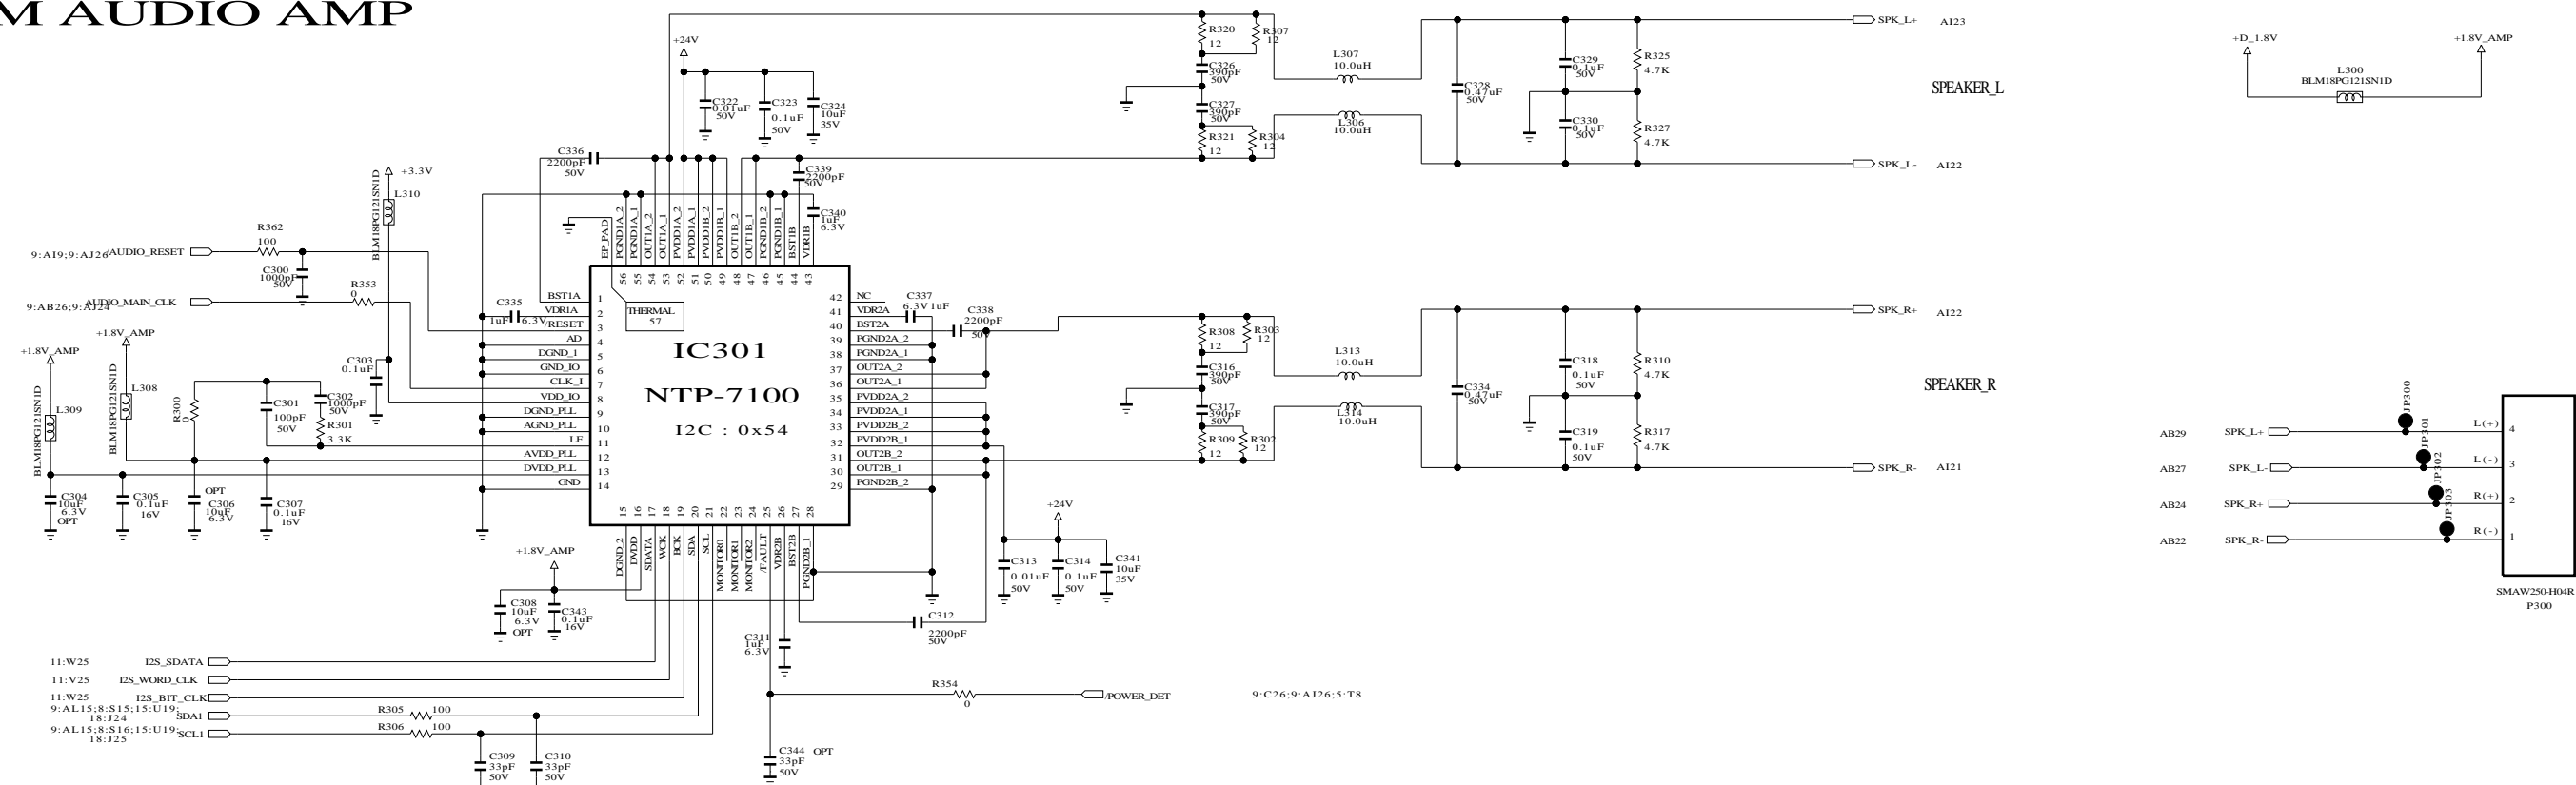




MCLK SDATA WCK BCK TP is necessary
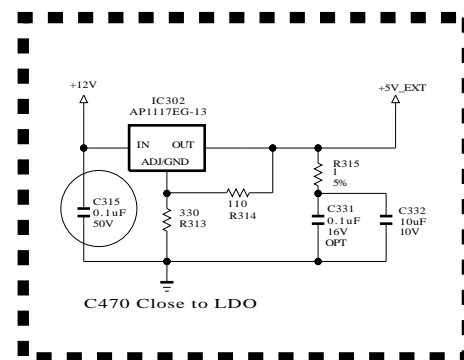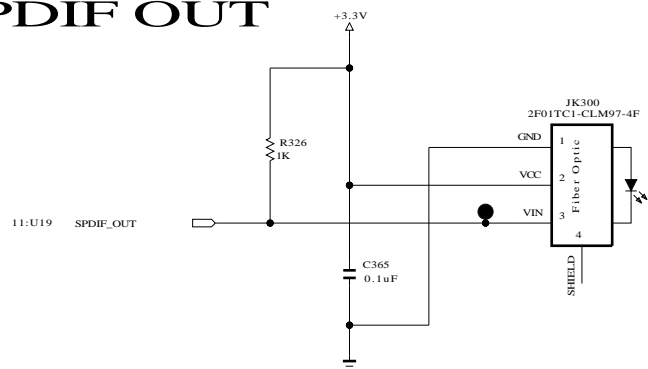
## SPDIF OUT

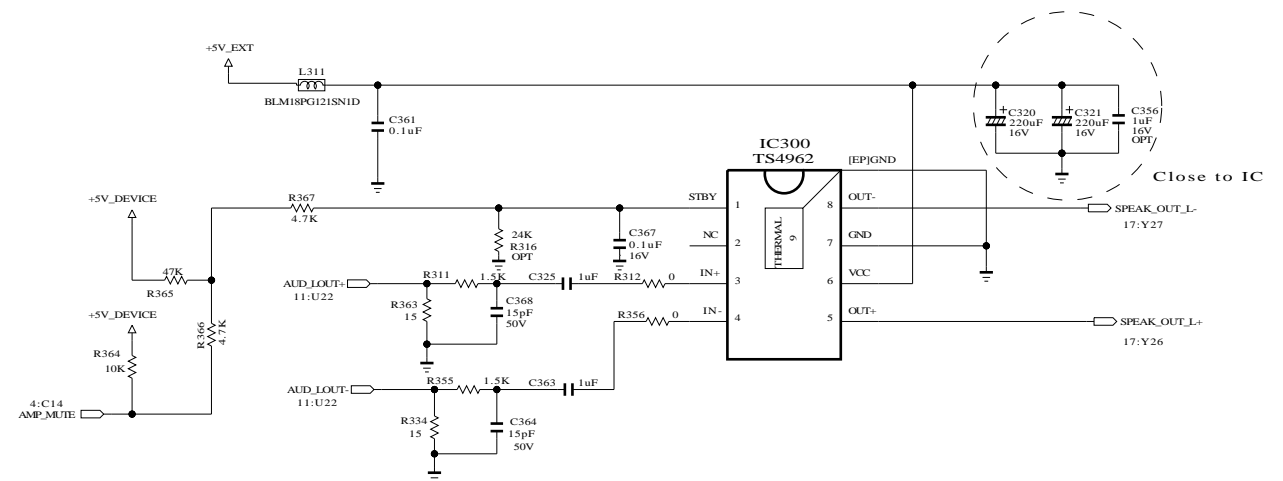

## EXTERNAL SPK OUT



 
 
 
THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET  
LGElectronics




MODEL	LV55SH-UA	DATE	2010.12.10
BLOCK	AUDIO	SHEET	3 / 18








Location	Value
Q404	AO4813
R441	0 ohm
R452	0 ohm
R432	0 ohm
R429	0 ohm
R449	0 ohm
R450	0 ohm

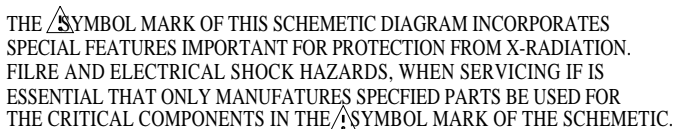\* +12V -> +3.3V for HDIM\_SW/ EXT\_VDEC/ PWM\_AMP / Flash / EEPROM / ProidIom

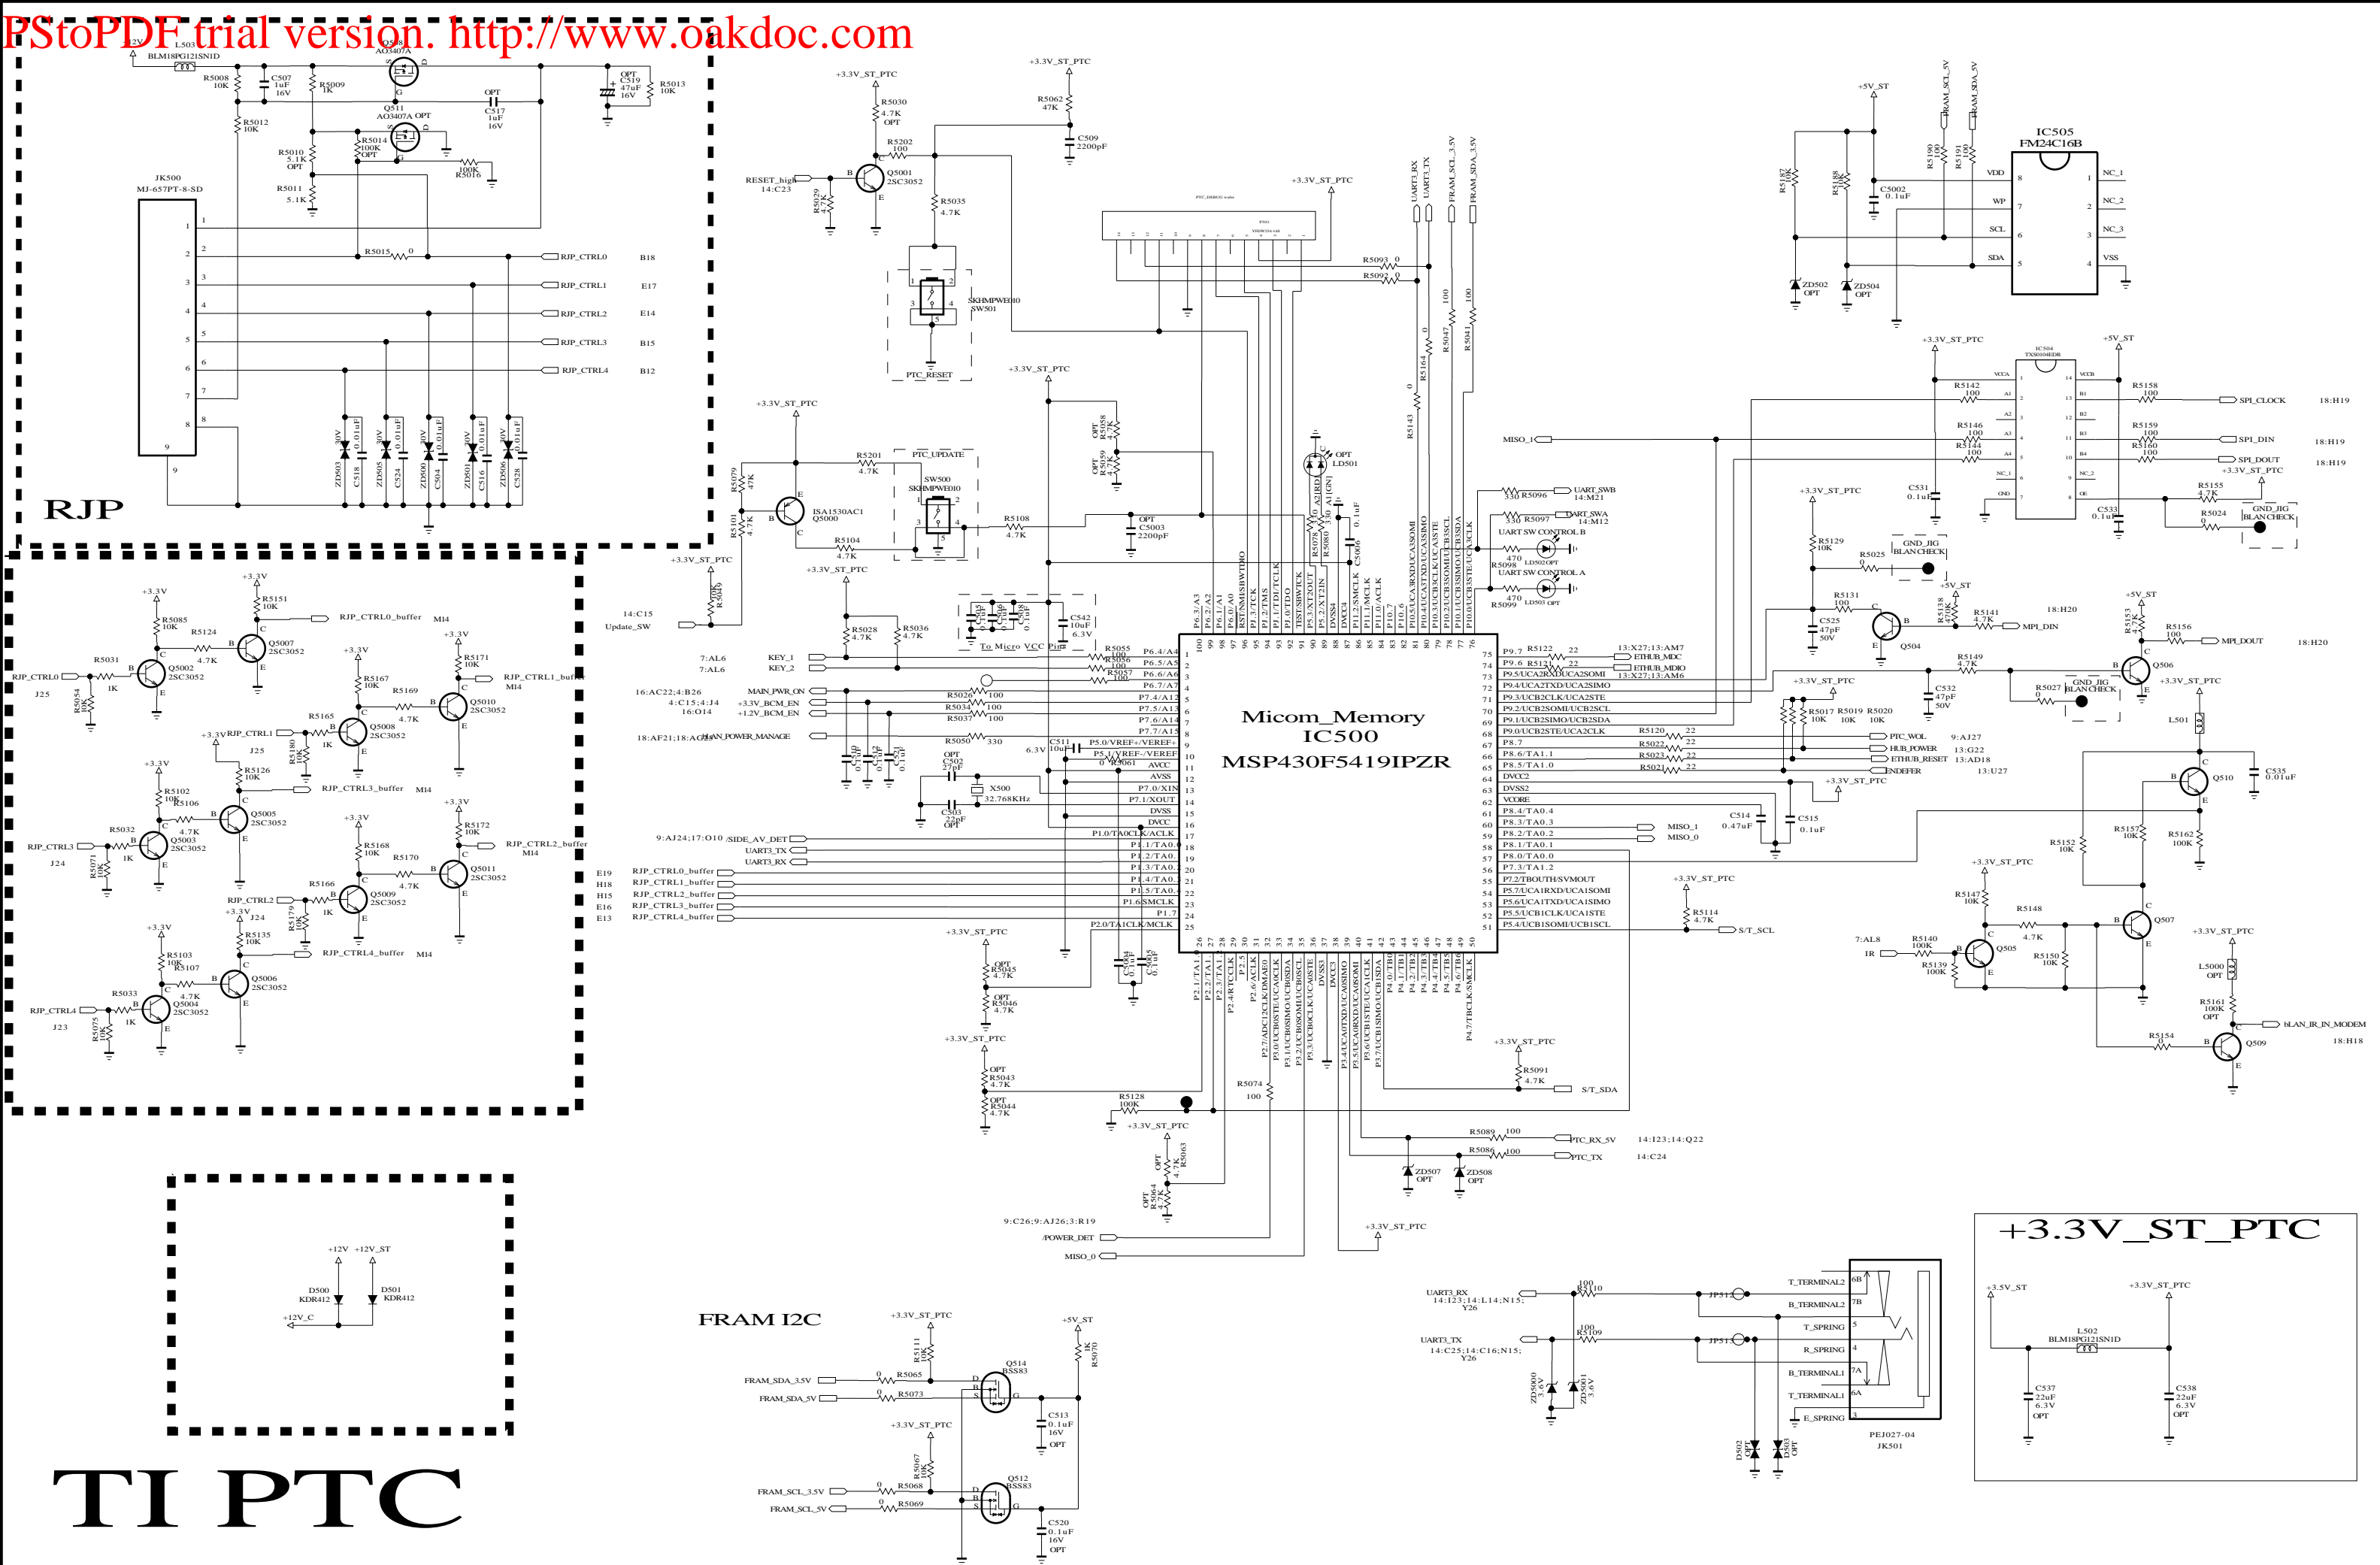



# TI PTC

THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET

LG Electronics



MODEL

LV555H-UA

# BLOCK

PTC/RJP


DATE

SHEET -



---

2010.12.10

$$5 \quad / \quad 18$$

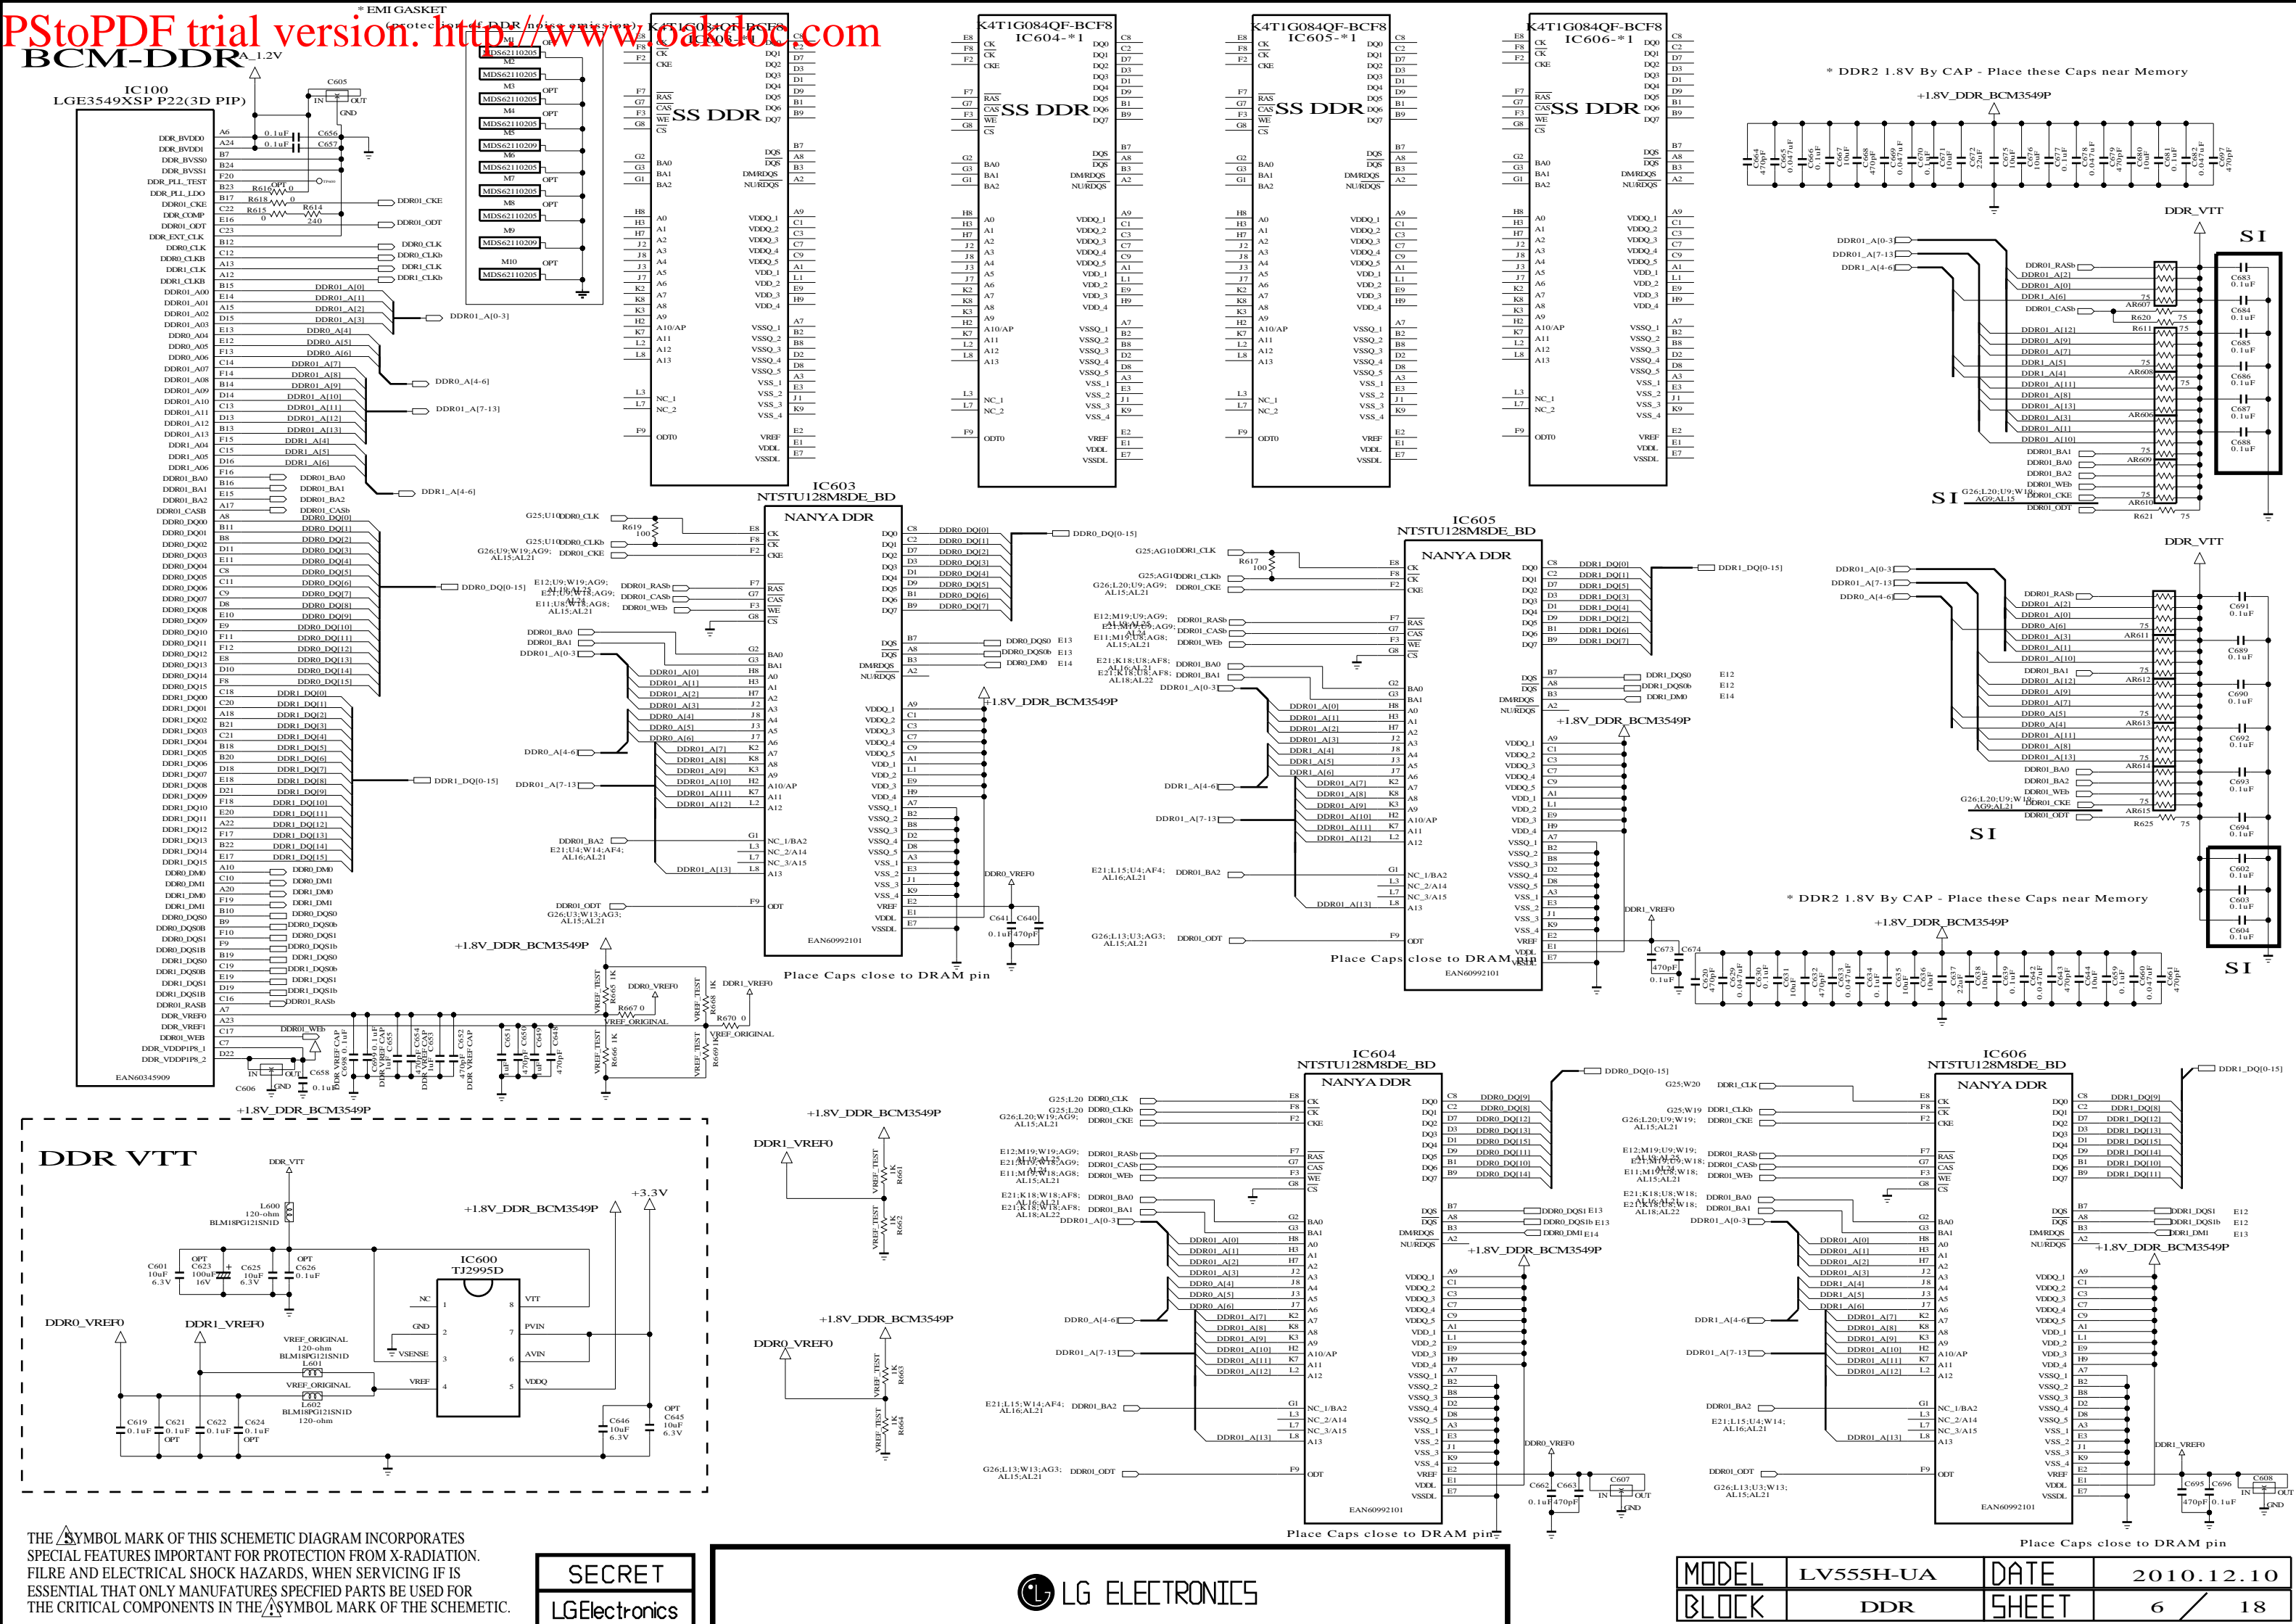

# PANEL WAFER

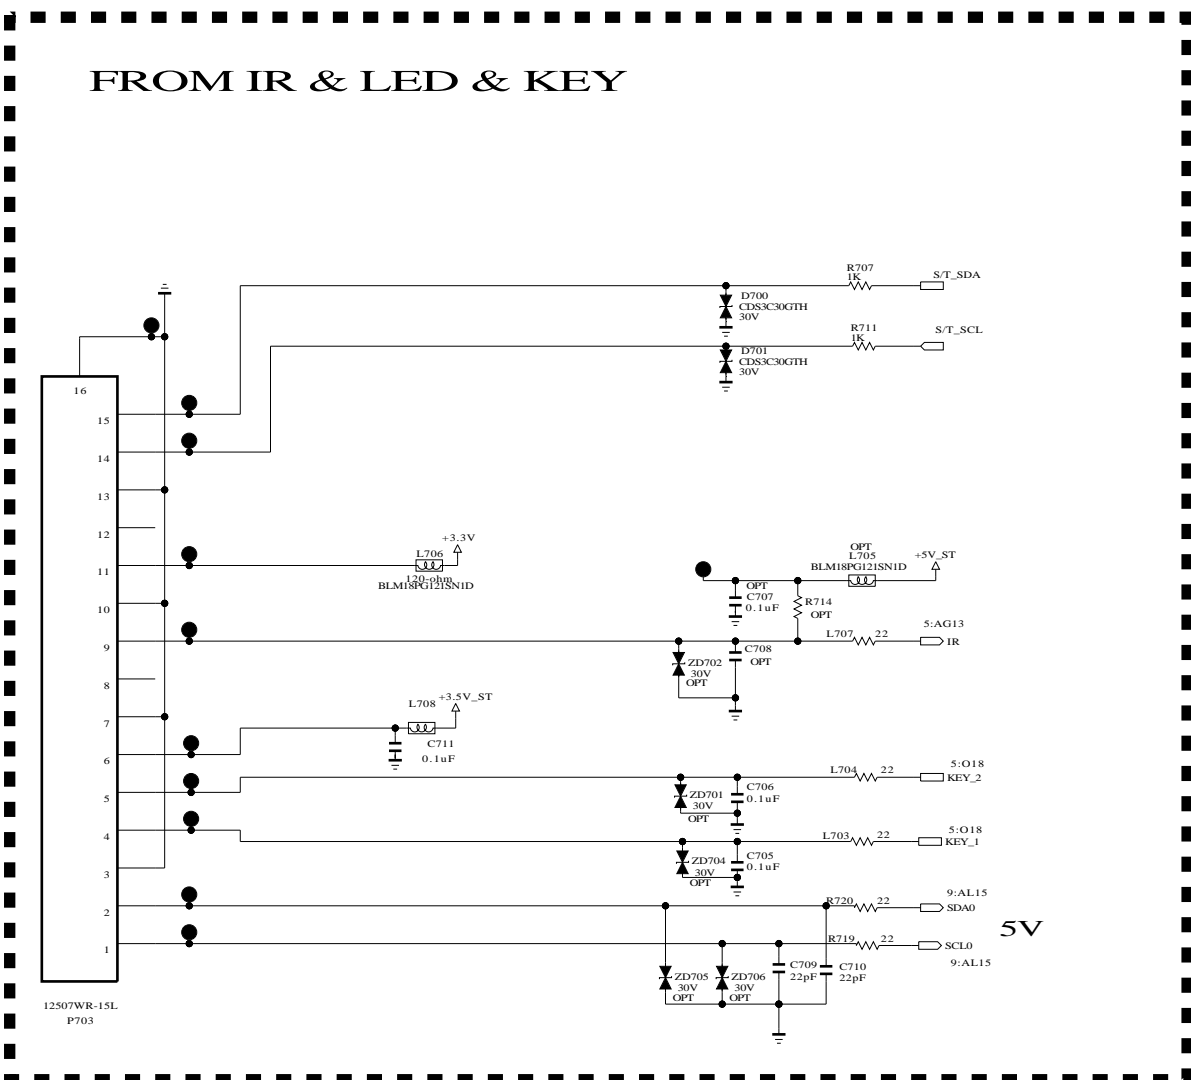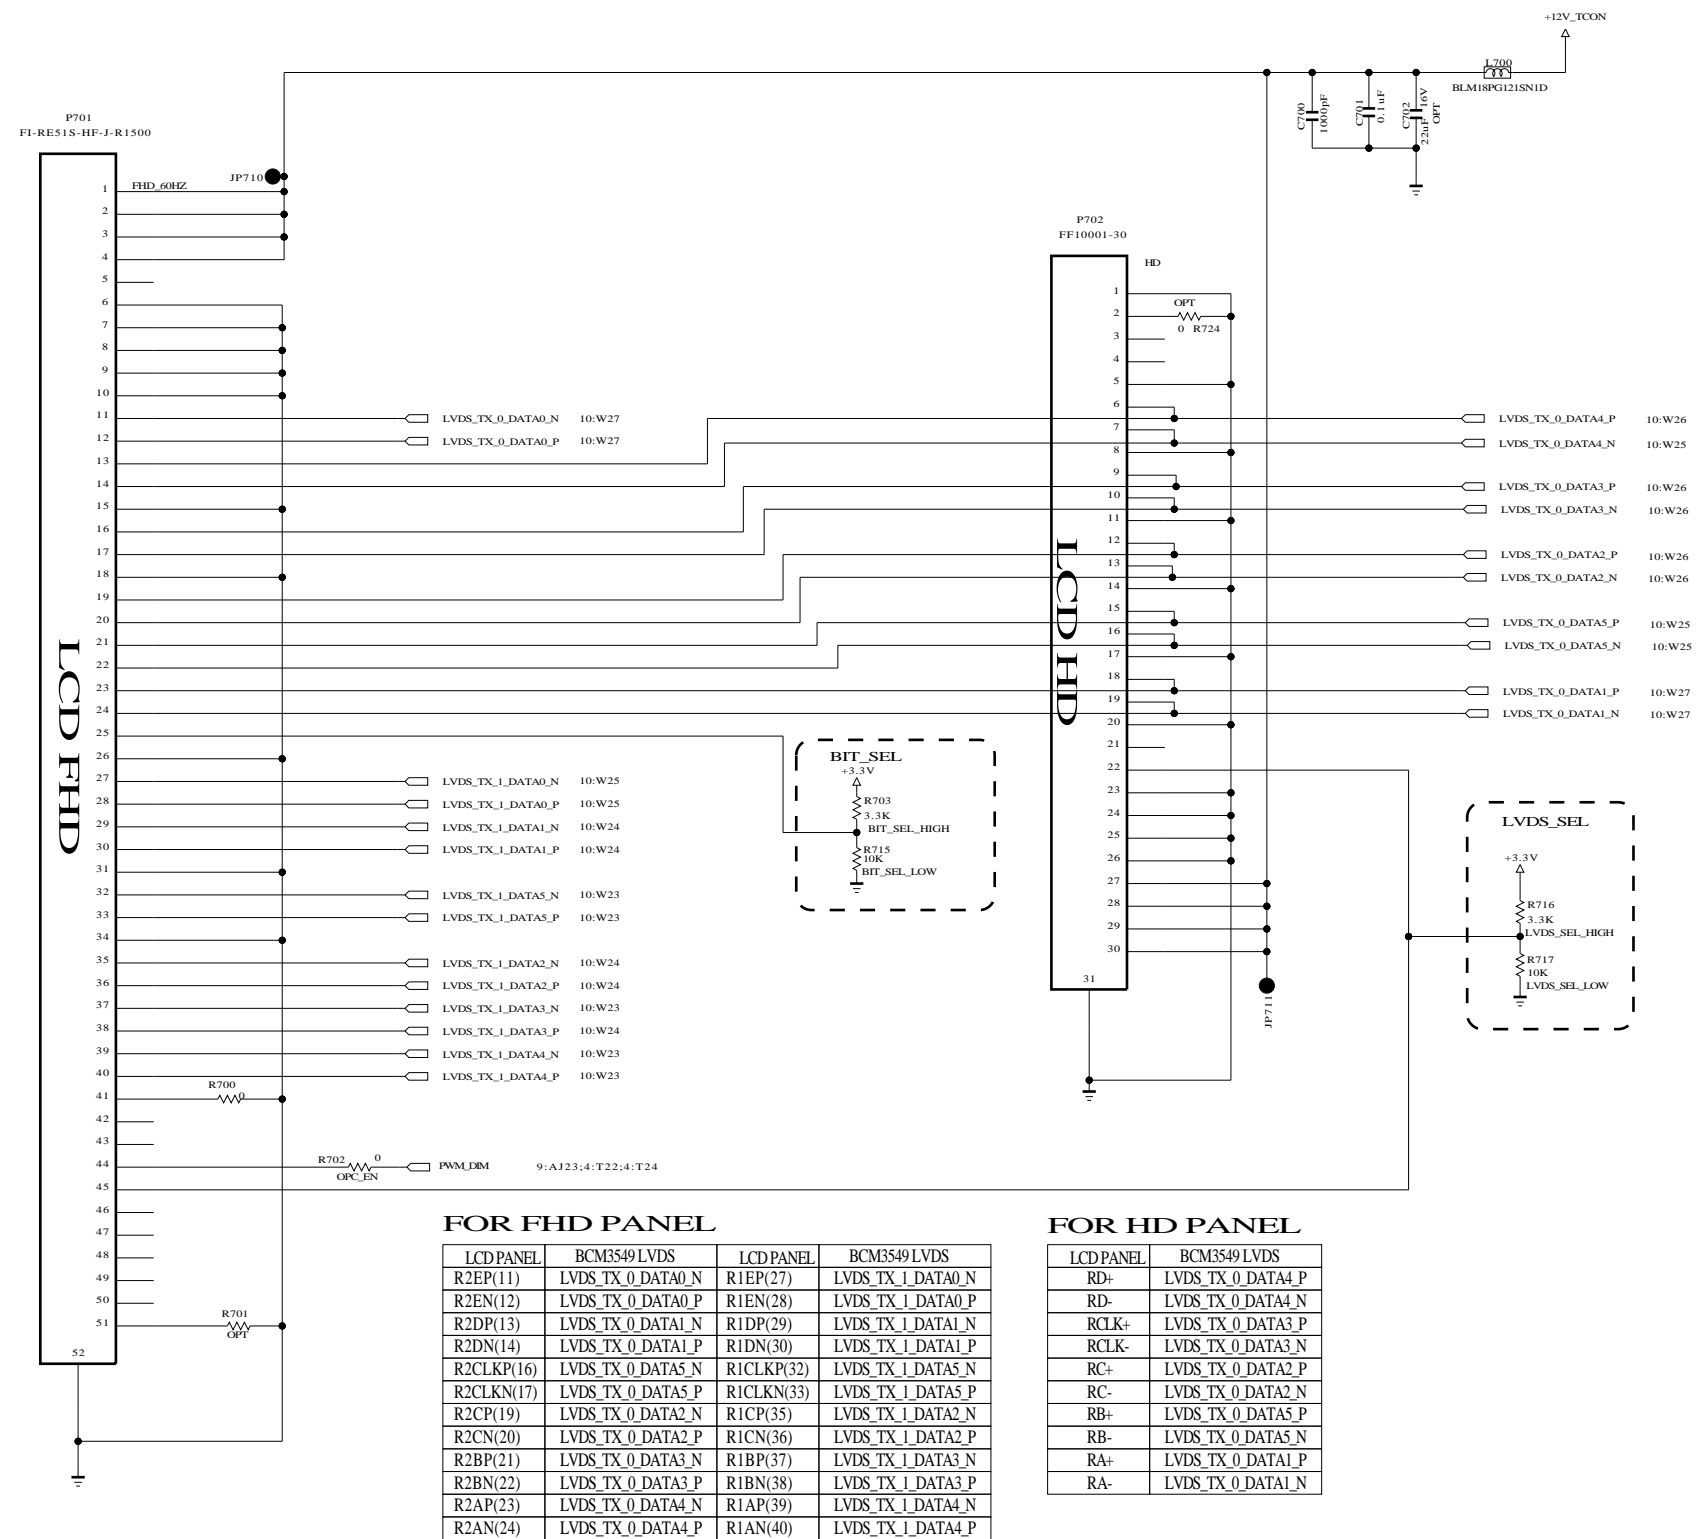


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET  
LGElectronics



MODEL	LV555H-UA	DATE	2010.12.10
BLOCK	LVDS/IR	SHEET	7 / 18






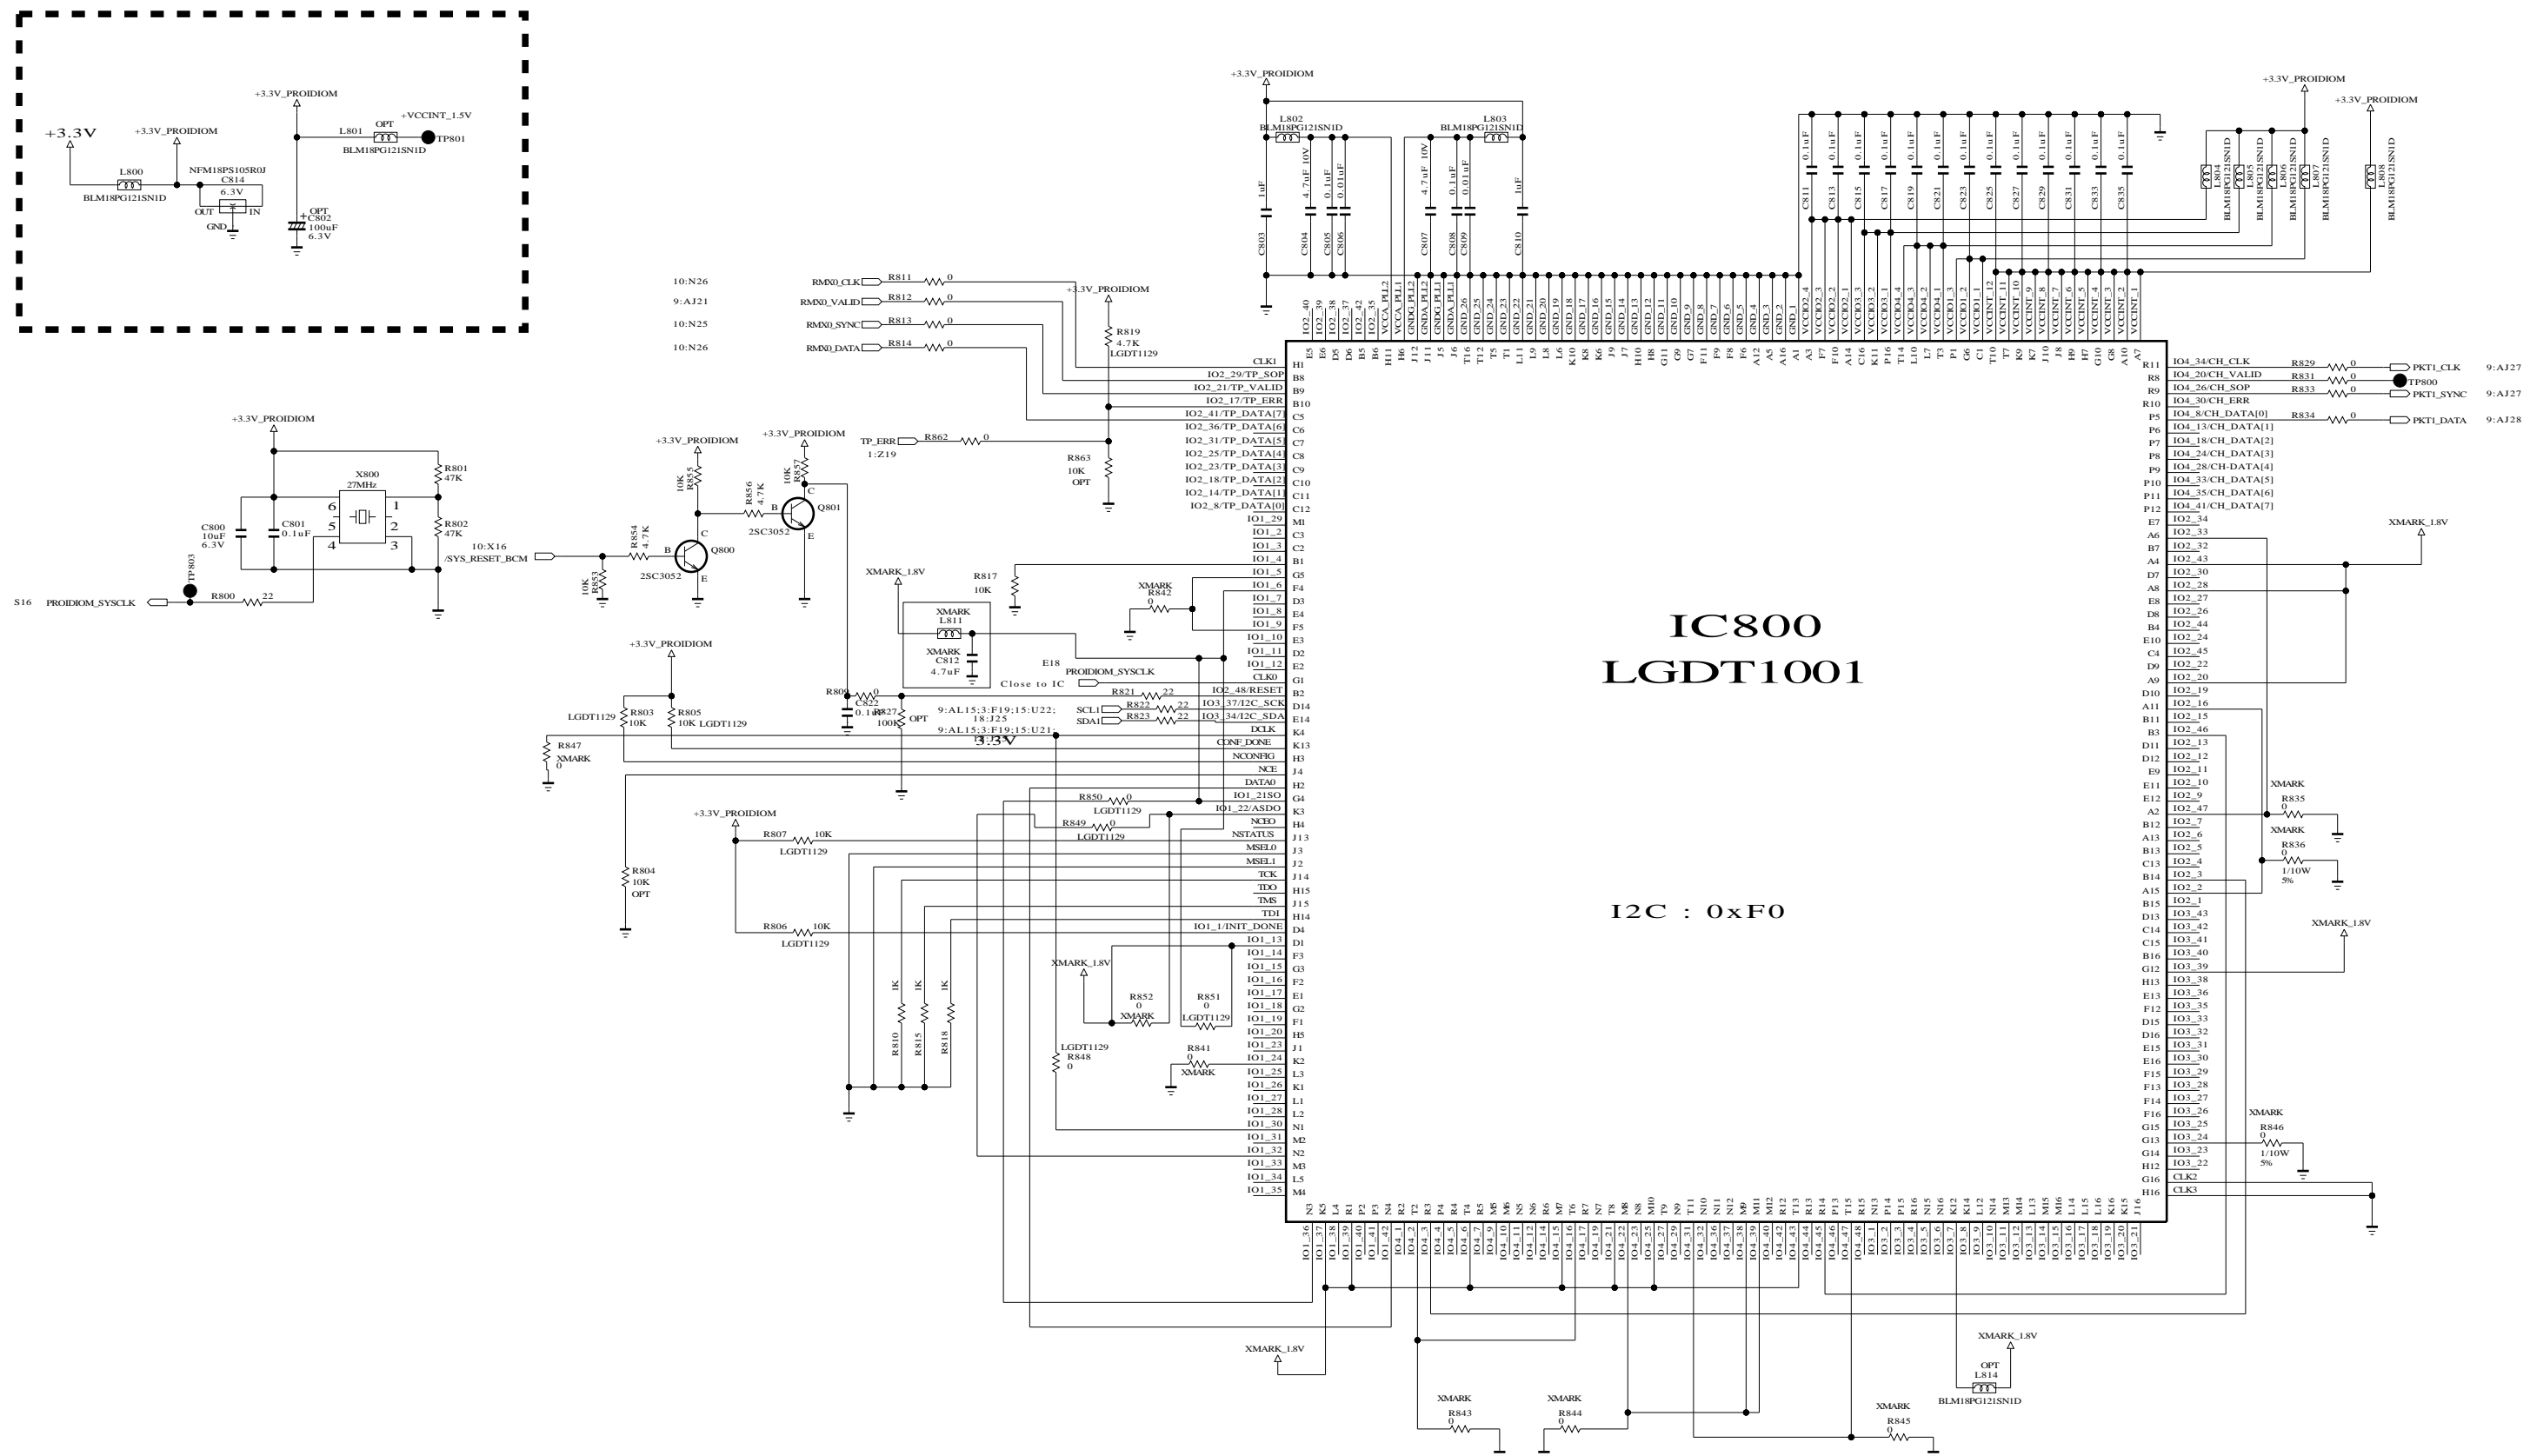


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILTRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.

SECRET  
LGElectronics


LG ELECTRONICS

MODEL	LV555H-UA	DATE	2010.12.10
BLOCK	PROiDIOM	SHEET	8 / 18

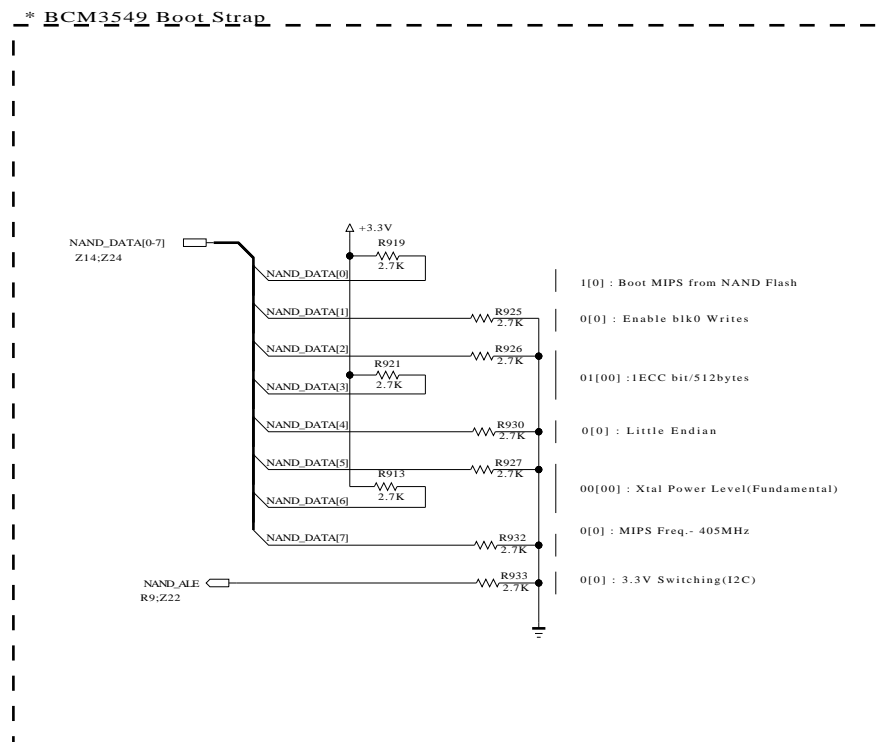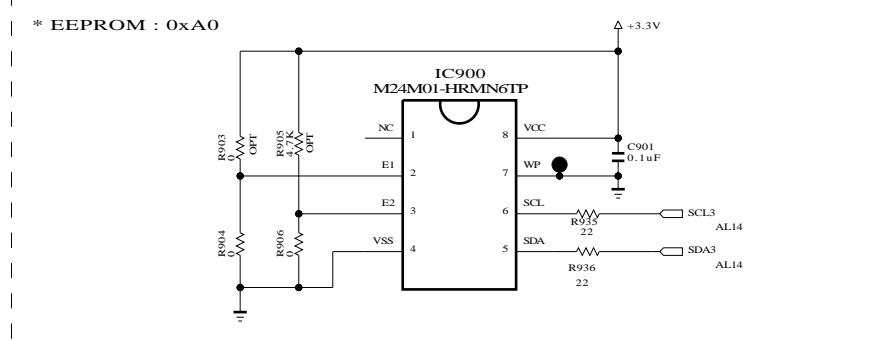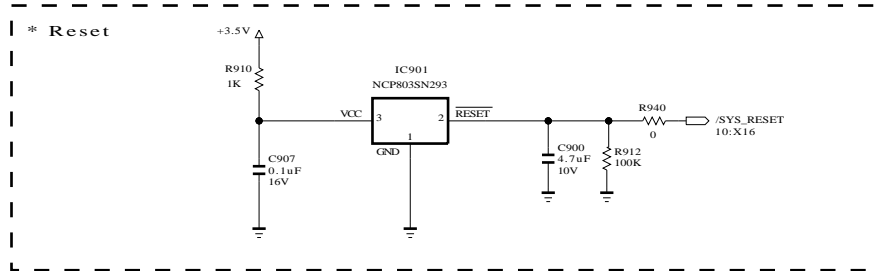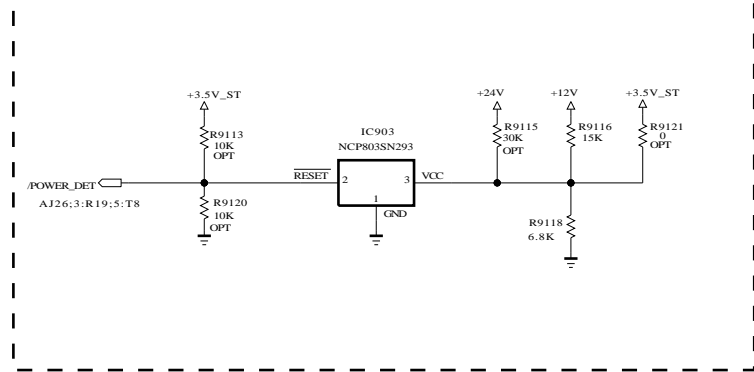


## Module option

GPIO	LOW	HIGH
0	AUO	LGD
1	FHD	HD
2	LVDS	Mini LVDS
7	NON GIP	GIP
13	LCD	LED
25	Non FRC	FRC
57	256MB	512MB

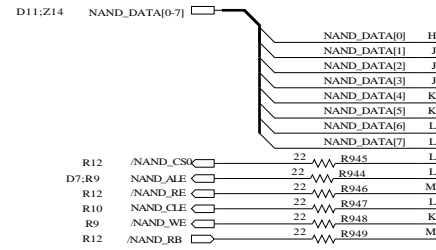


## \* NAND FLASH MEMORY 4Gbit (512M for BB)

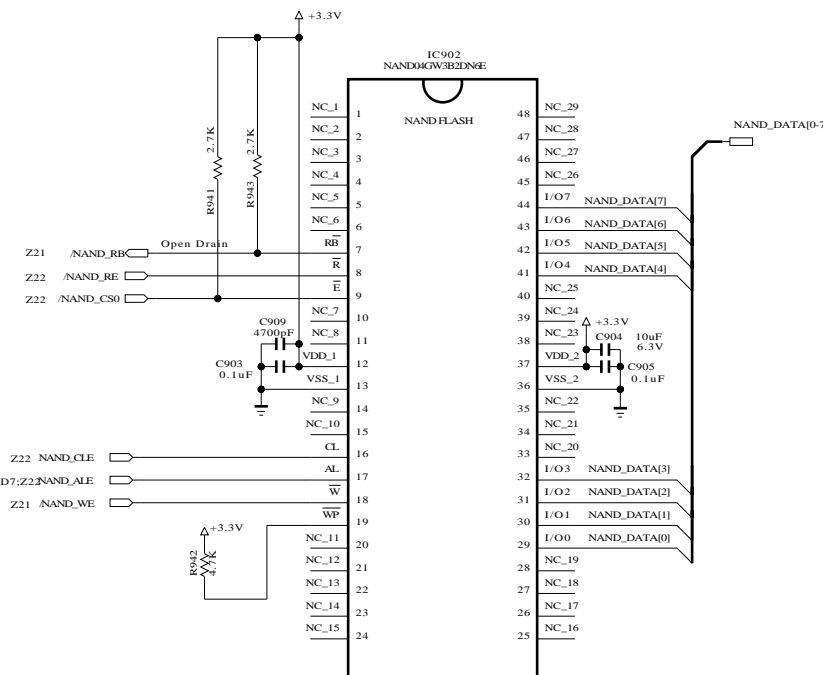




## \* I2C MAP

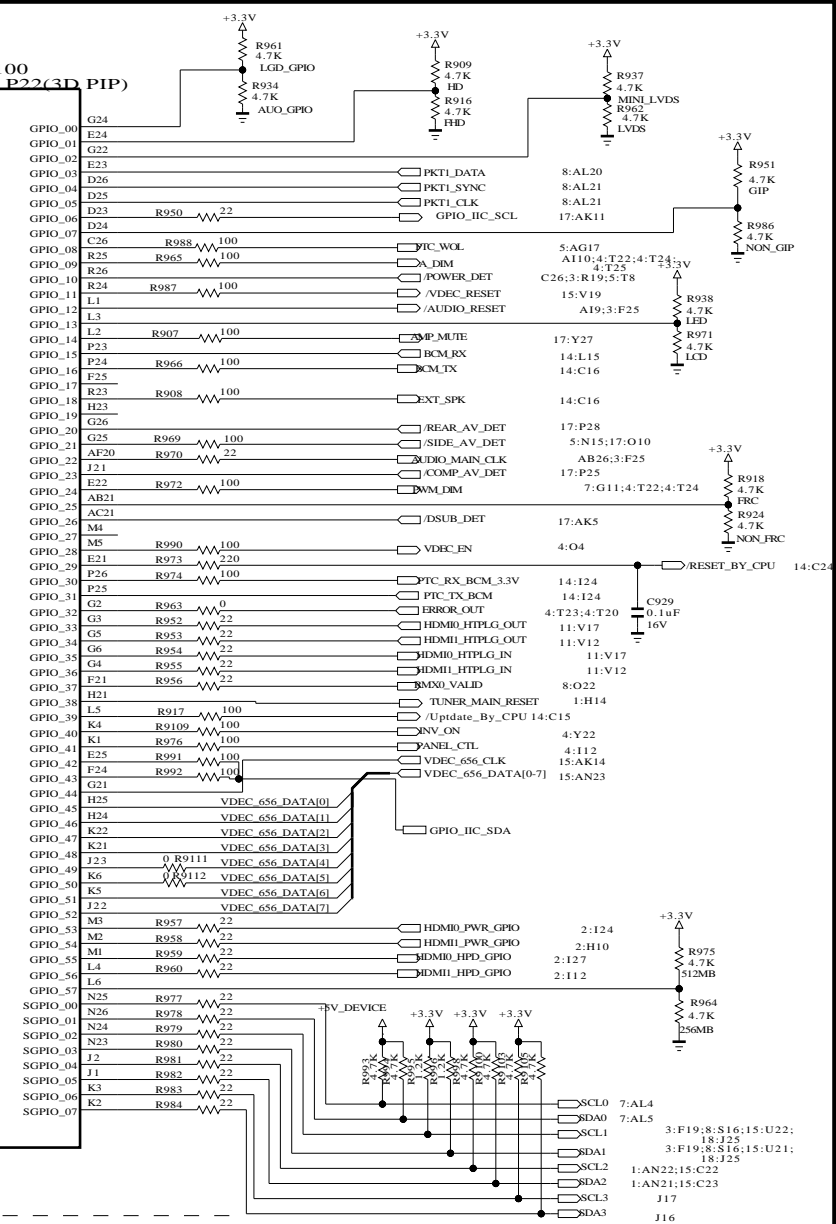\* I2C\_0 :  
\* I2C\_1 :  
\* I2C\_2 :  
\* I2C\_3 :



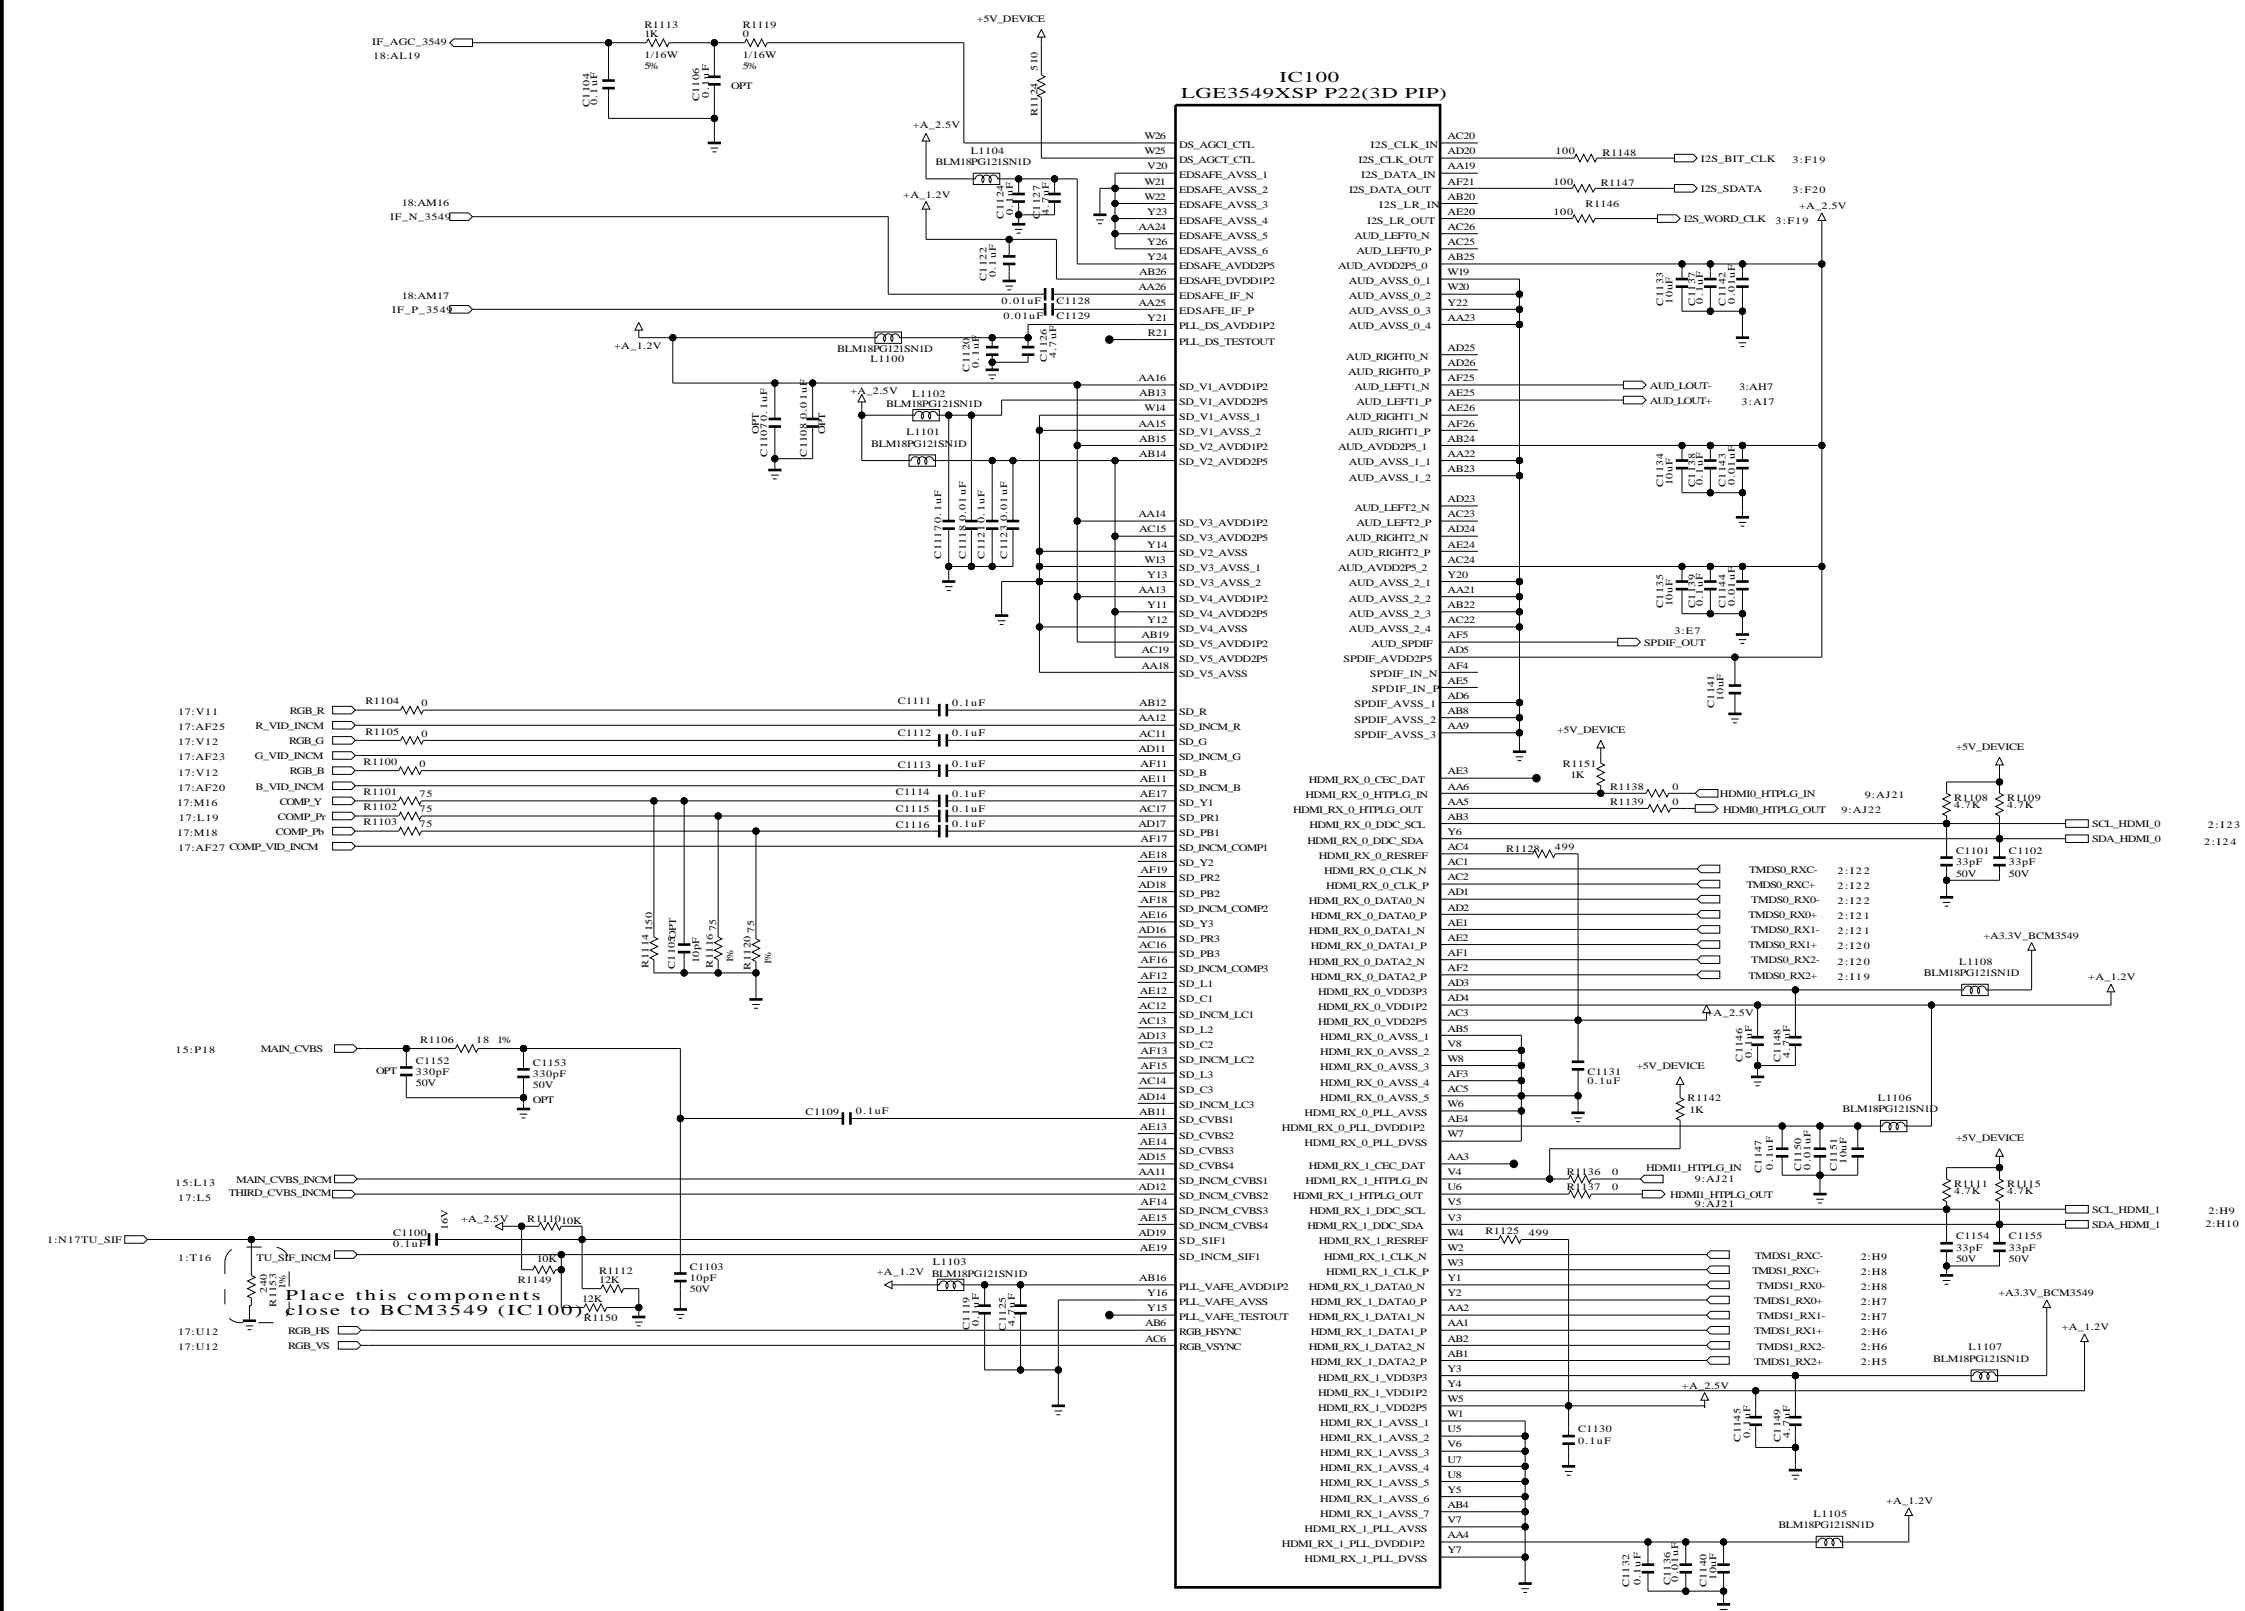










THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILTRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.



SECRET  
LGElectronics



MODEL	LV555H-UA	DATE	2010.12.10
BLOCK	BCM_VIDEO_IN	SHEET	11 / 18

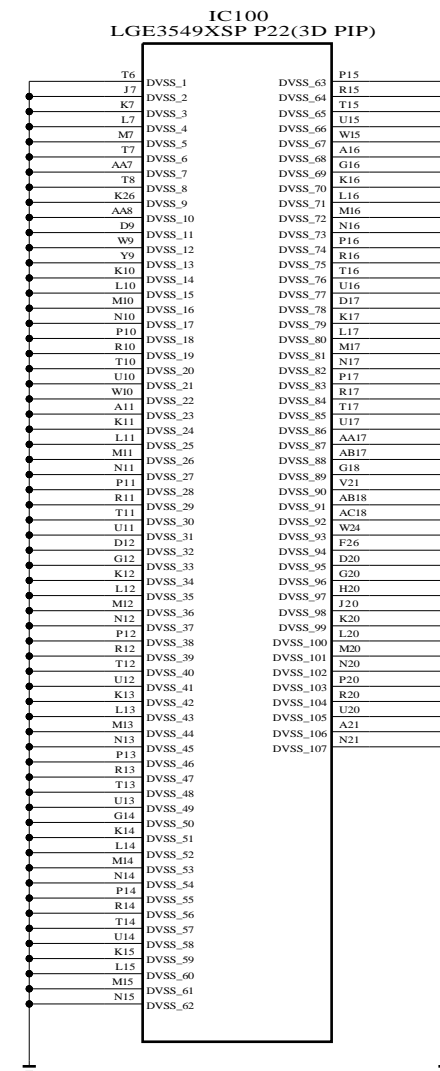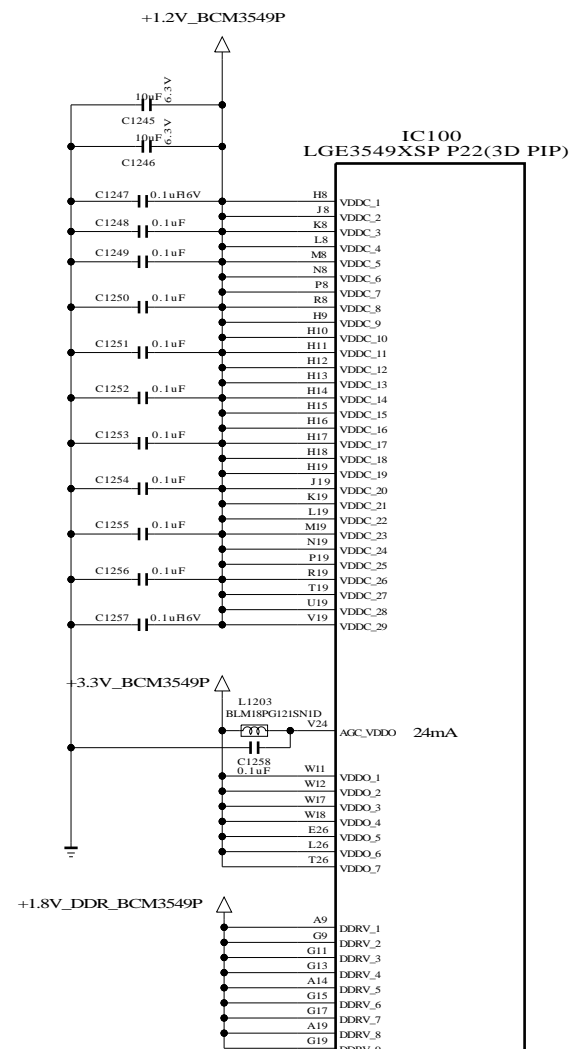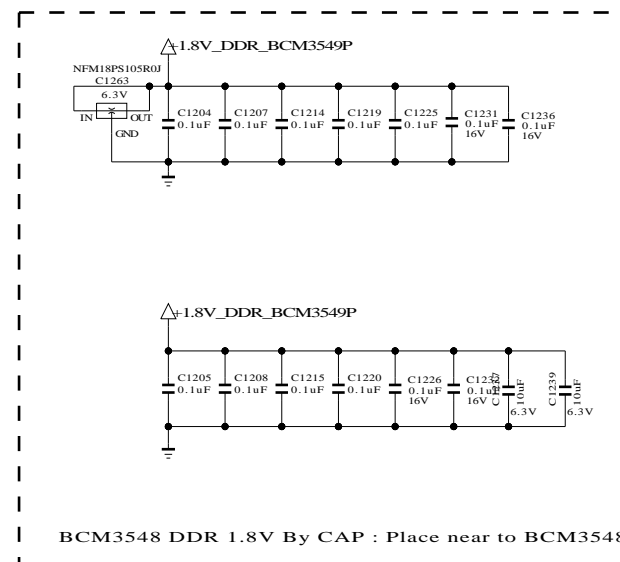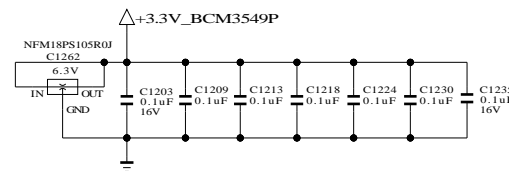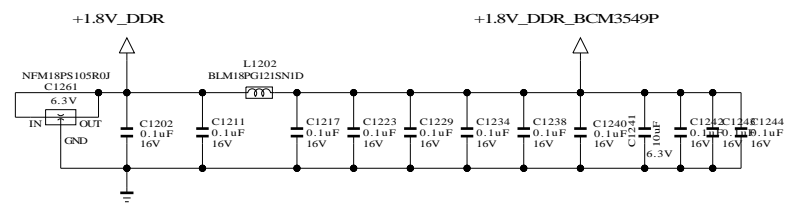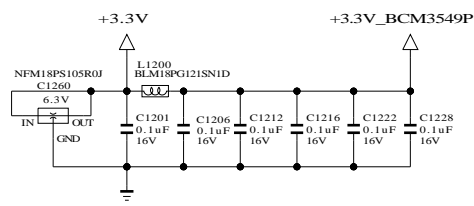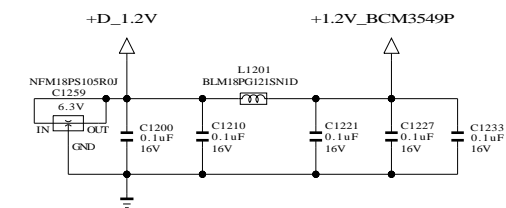






THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.


SECRET  
LGElectronics




MODEL	LV555H-UA	DATE	2010.12.10
BLOCK	BCM POWER	SHEET	12 / 18

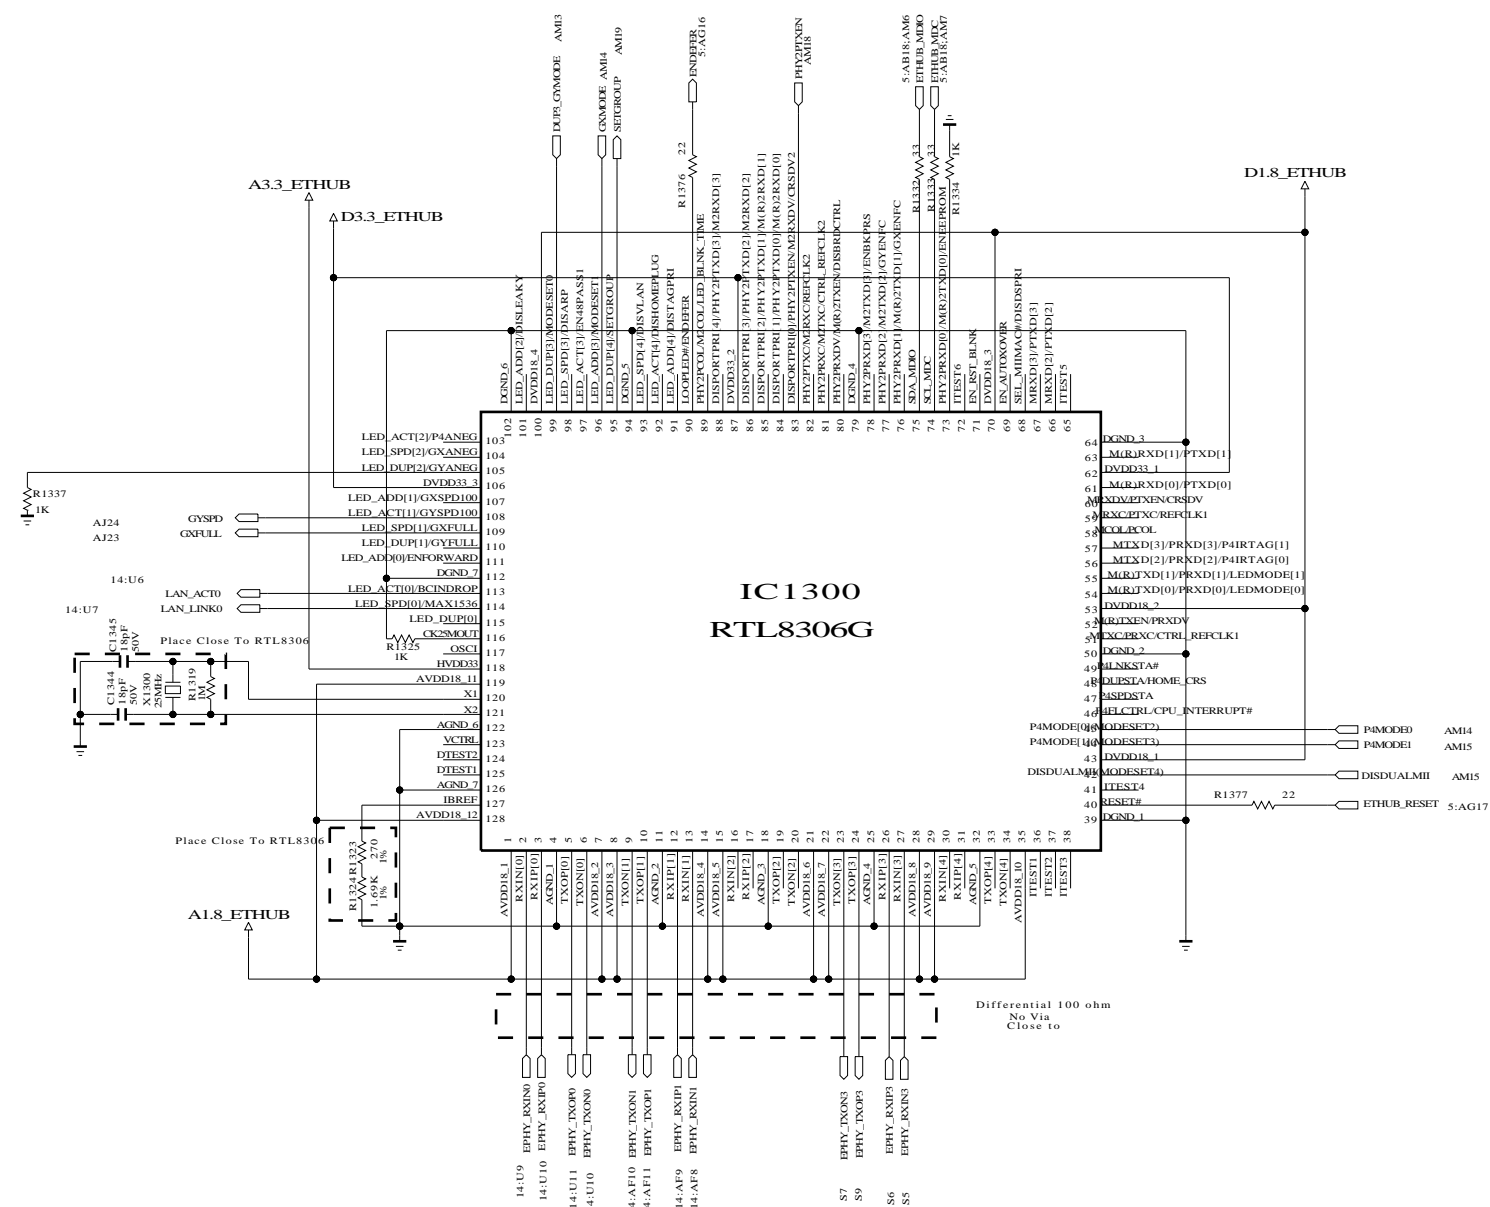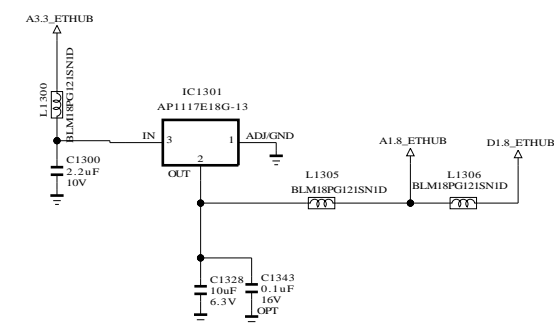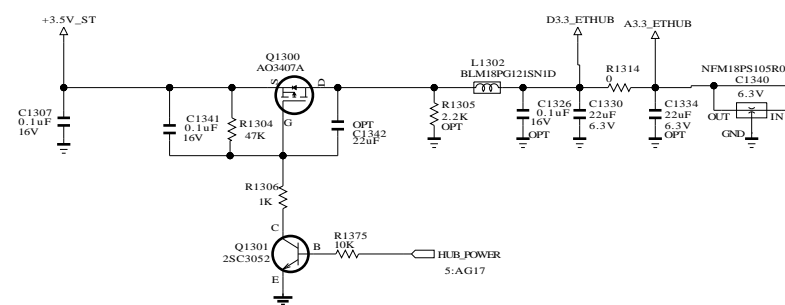



## STRAPPING PIN CONFIG

 



PHY2PRXDV : Broadcast strom control enable/disable  
PHY2PRXD3 : Backpressure enable/disable  
ENDEFER : Defer enable/disable  
EN\_AUTOXOVER : Auto cross over enable/disable

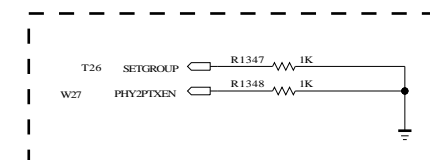

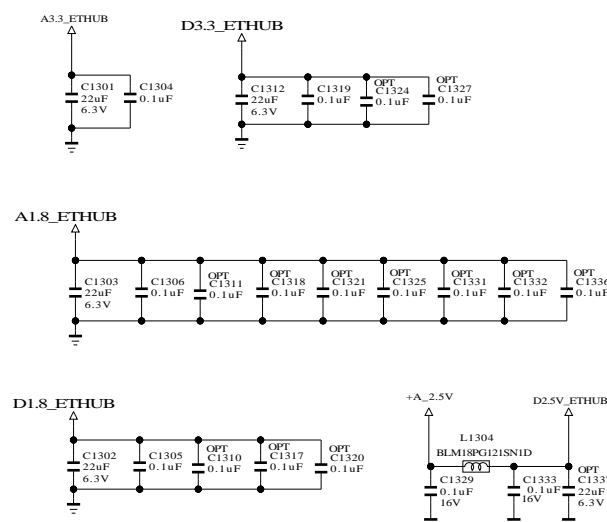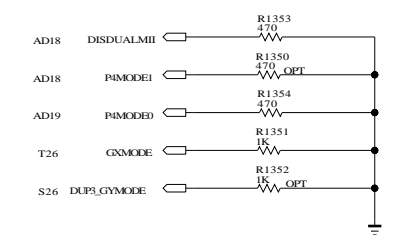

## CONFIG FOR MAC5

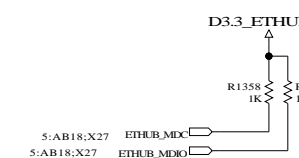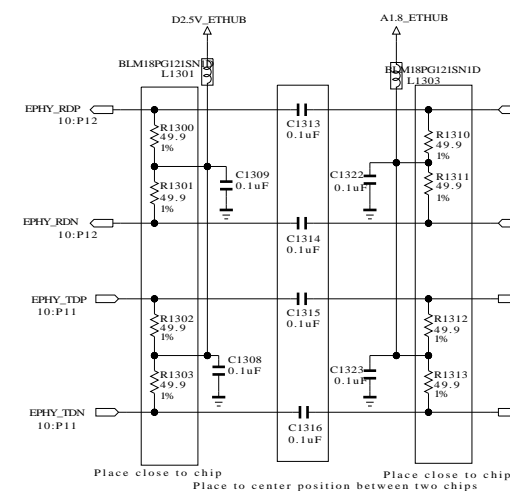

## BCM TO RTL matching




THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET  
LGElectronics






MODEL	LV555H-UA	DATE	2010.12.10
BLOCK	ETHERNET HUB	SHEET	13 / 18

## Serial Port

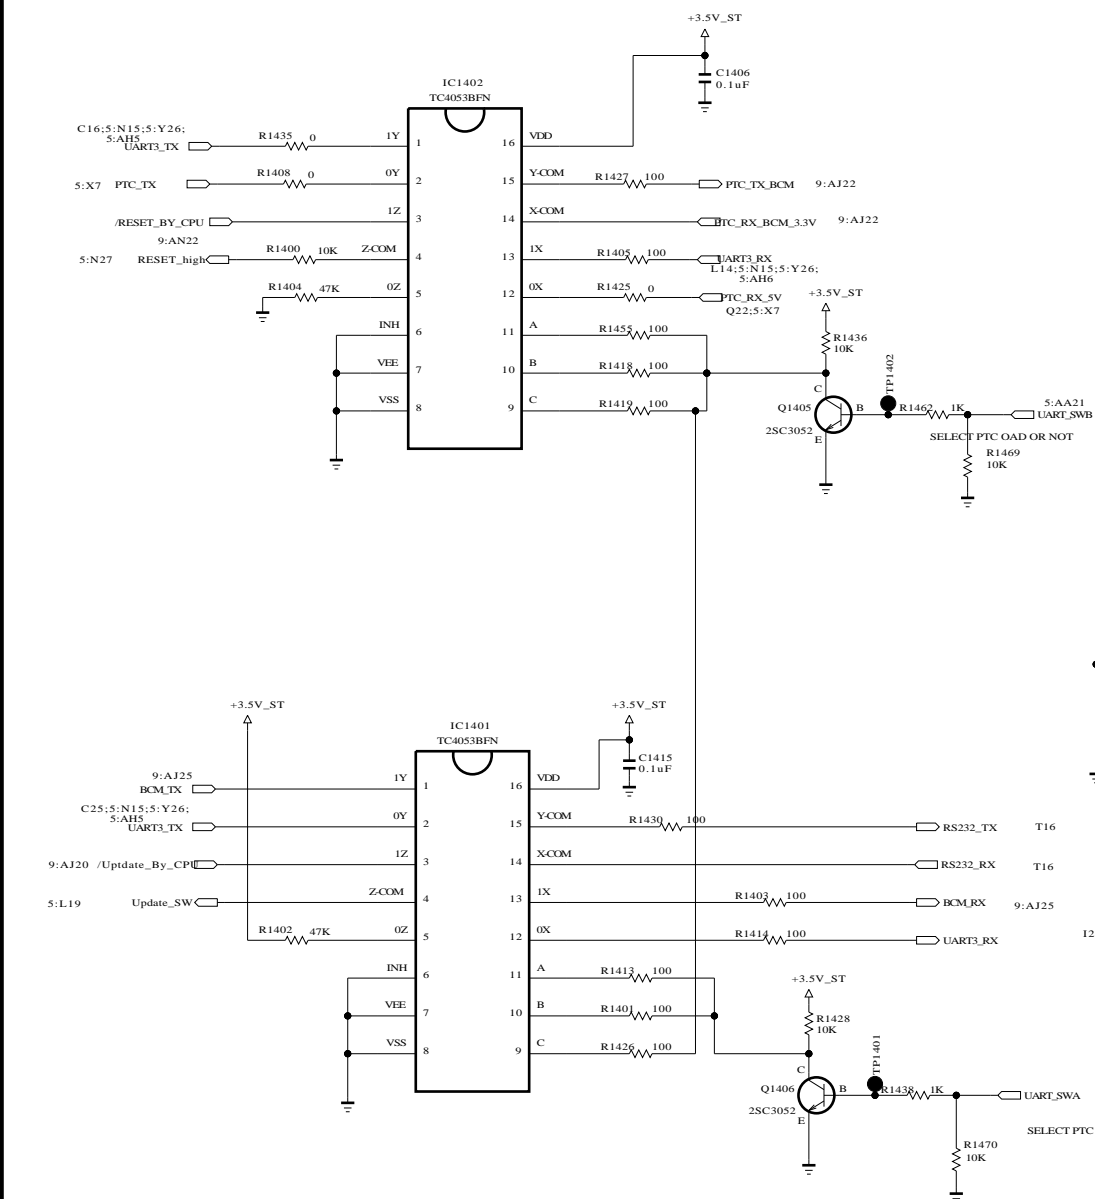



Objective	SW_A	SW_B
BCM/DEBUG	0	X
PTC/DEBUG	1	1
PTC/USB	X	0
COMMON	X	1
SIMULATION	X	1

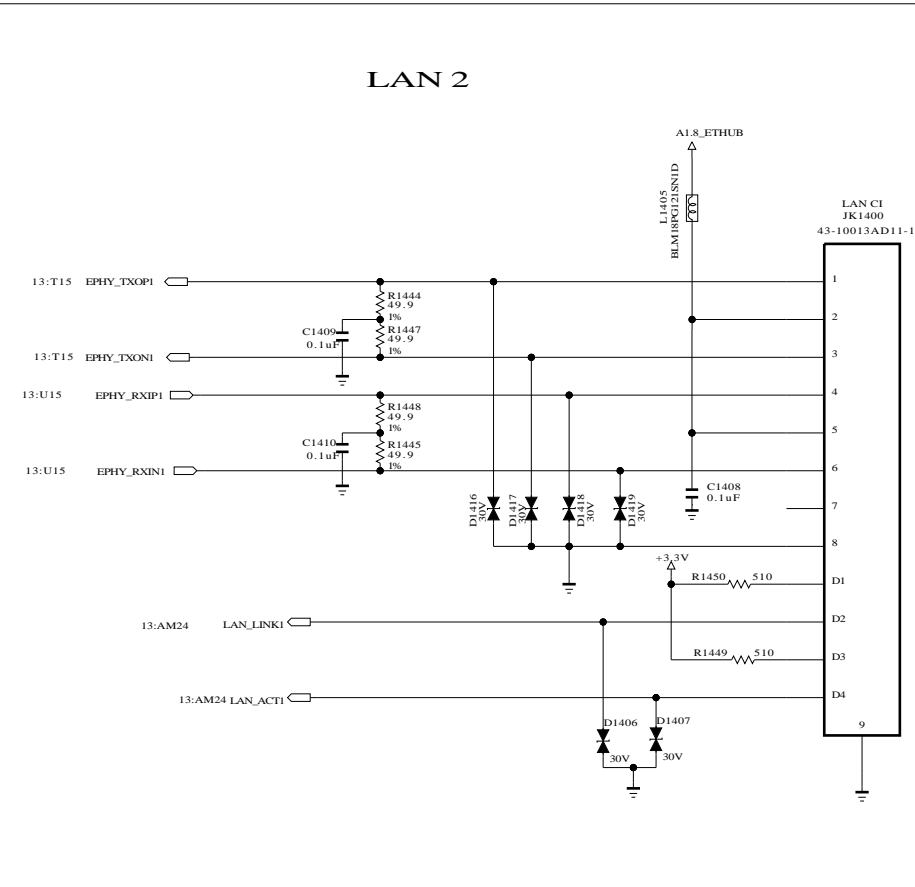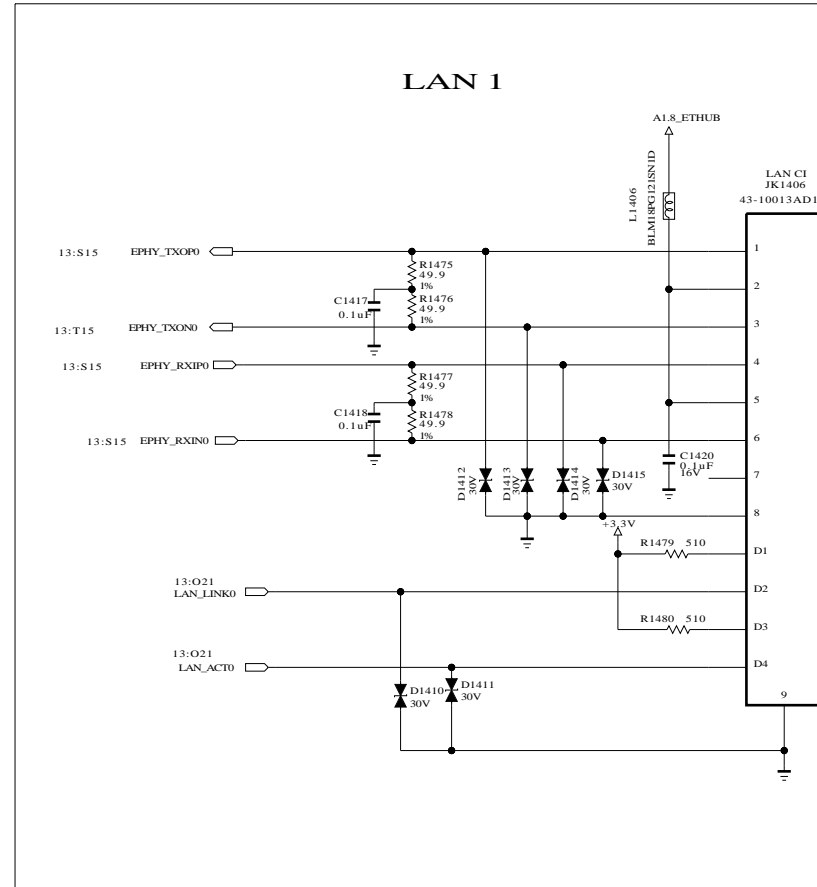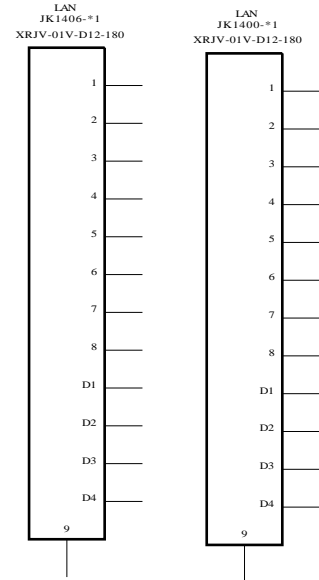



Trace impedance : 100 ohm differential impedance to GND plane  
5 mils trace width with 7 mils air gap on P/N pair.  
Adjacent TX/RX differential pairs should be separated by more than 15 mils to each other
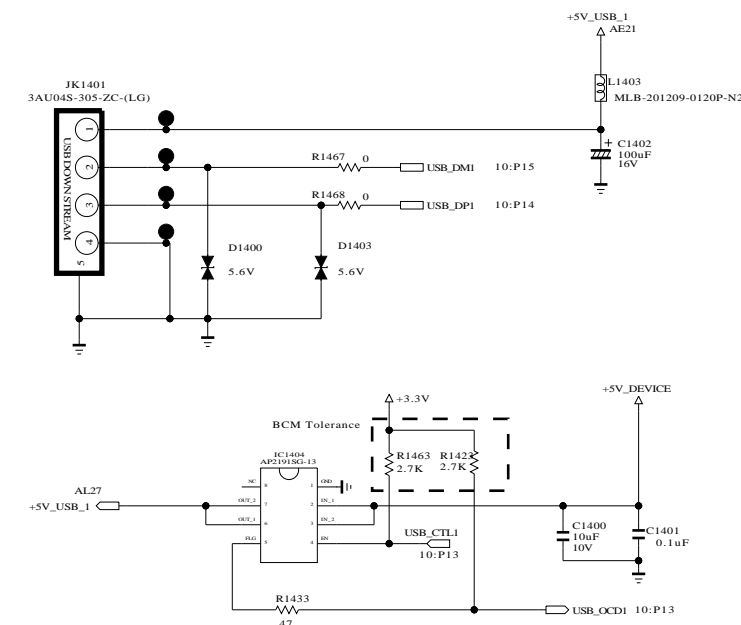
## USB JACK

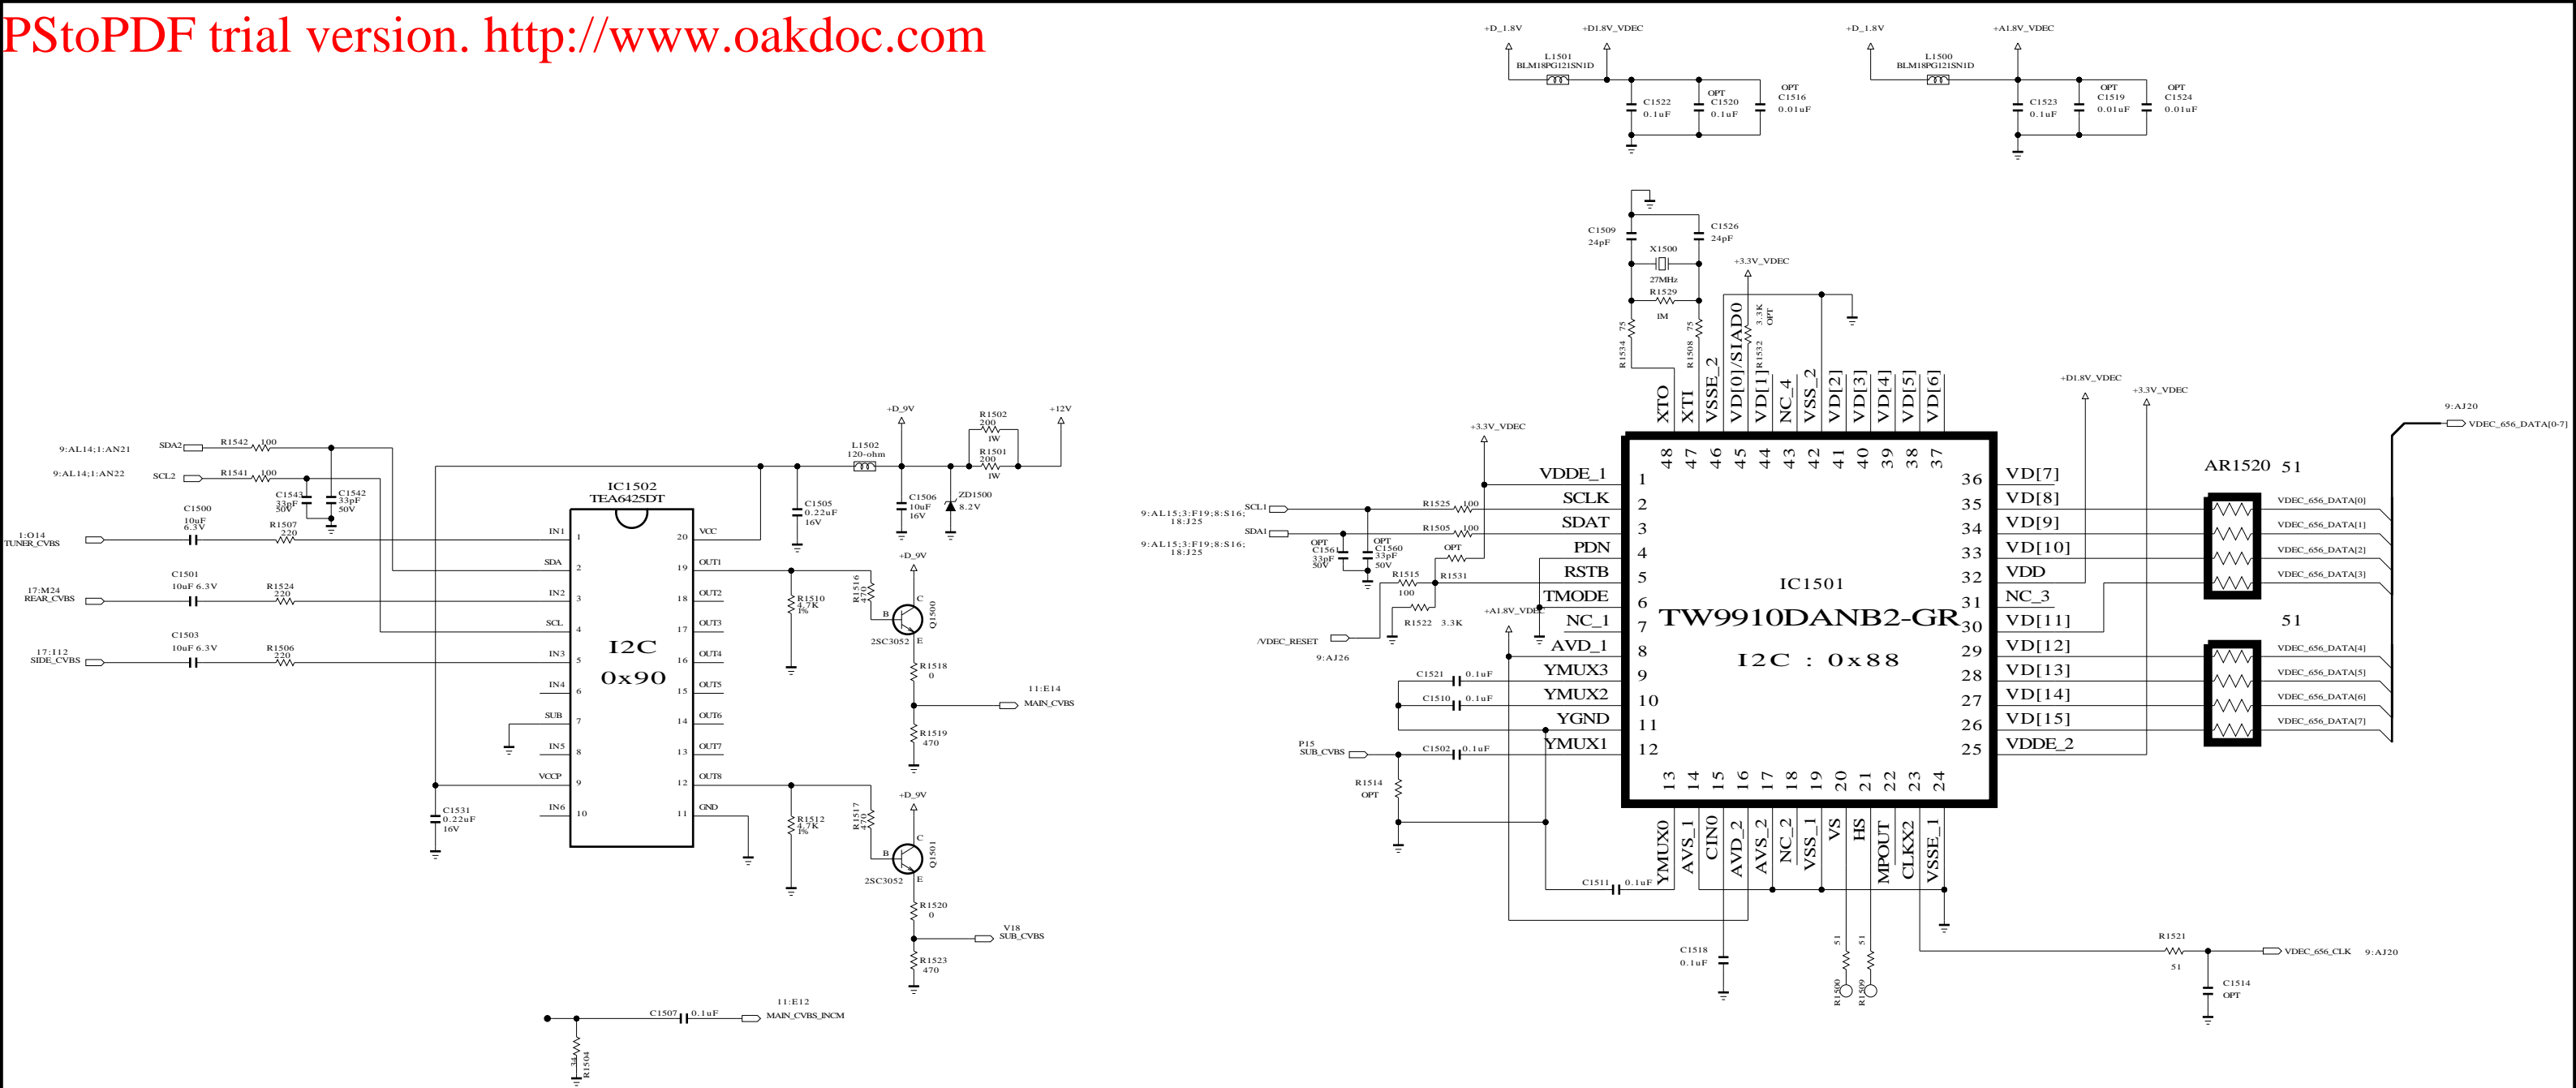




THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILTRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.


SECRET  
LGElectronics




MODEL	LV555H-UA	DATE	2010.12.10
BLOCK	VDEC	SHEET	15 / 18

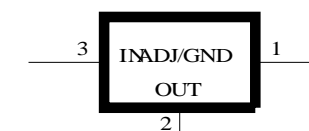


JK1702  
PPJ238-01

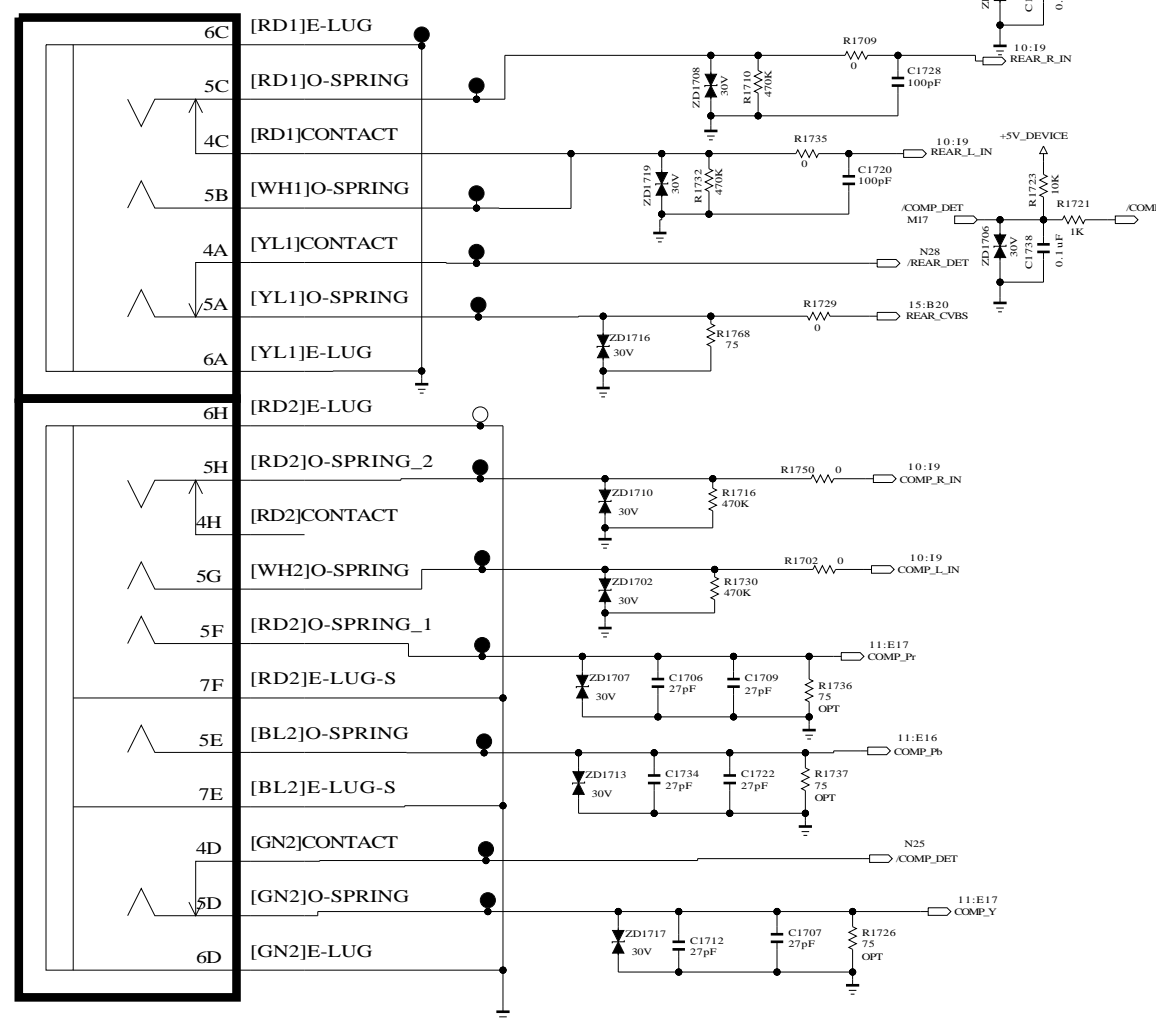


# SPEAKER OUT

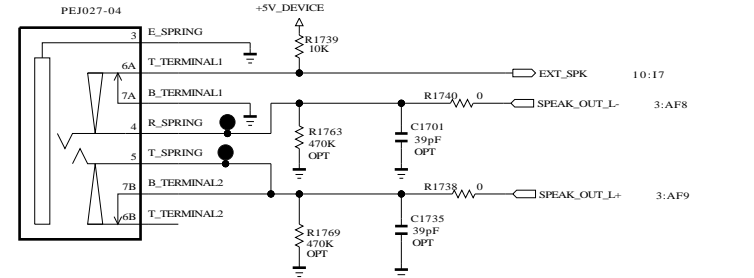


## PC AUDIO IN

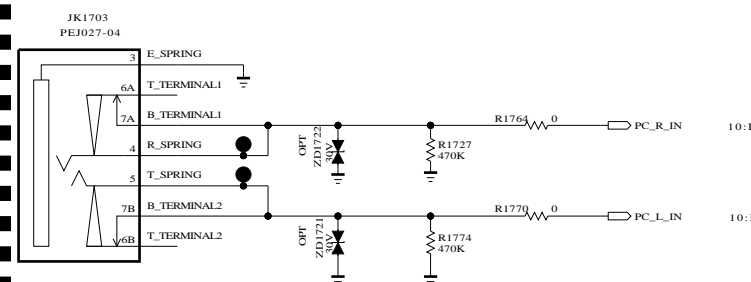


## INCM TRACE

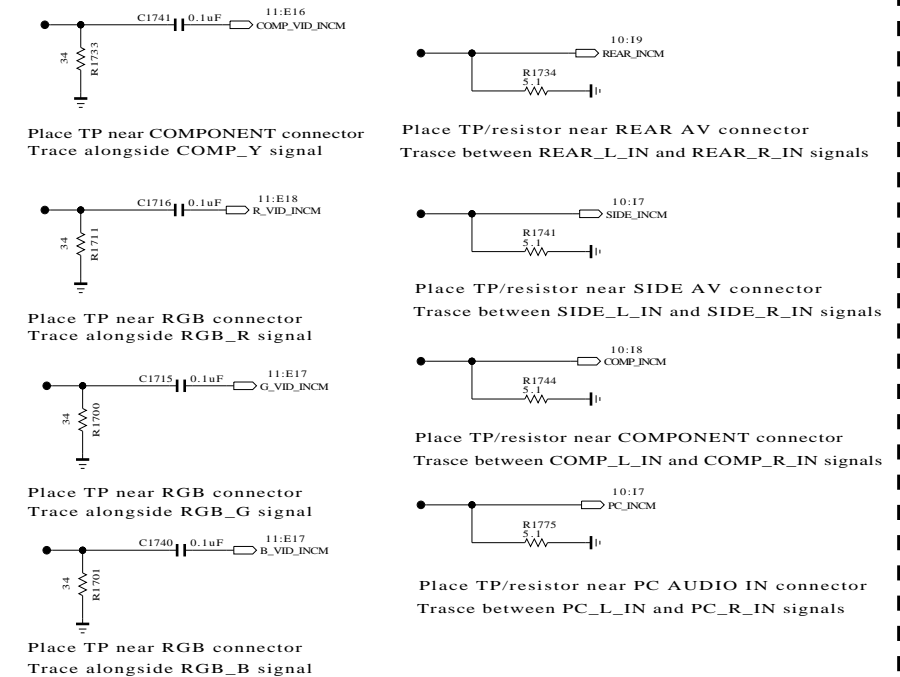

## SIDE A V

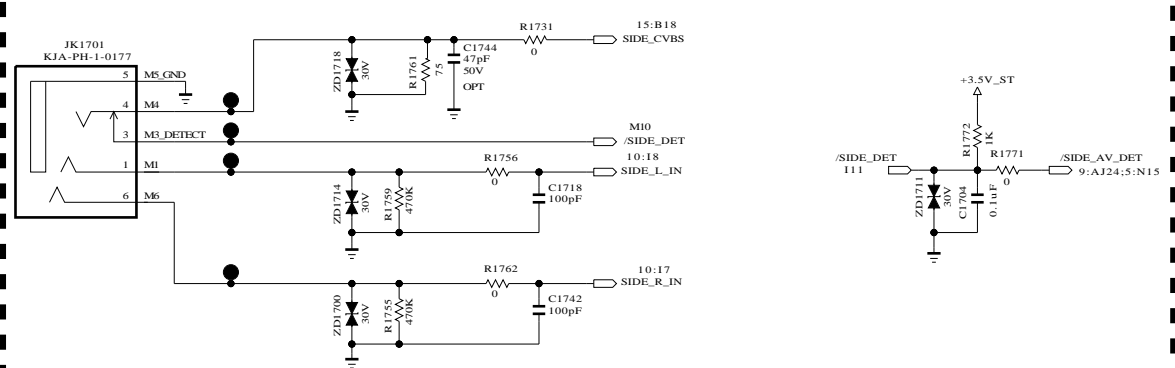


 

## CVBS TEST



Place TP near THIRD\_CVBS signal start point  
Trace alongside THIRD\_CVBS signal
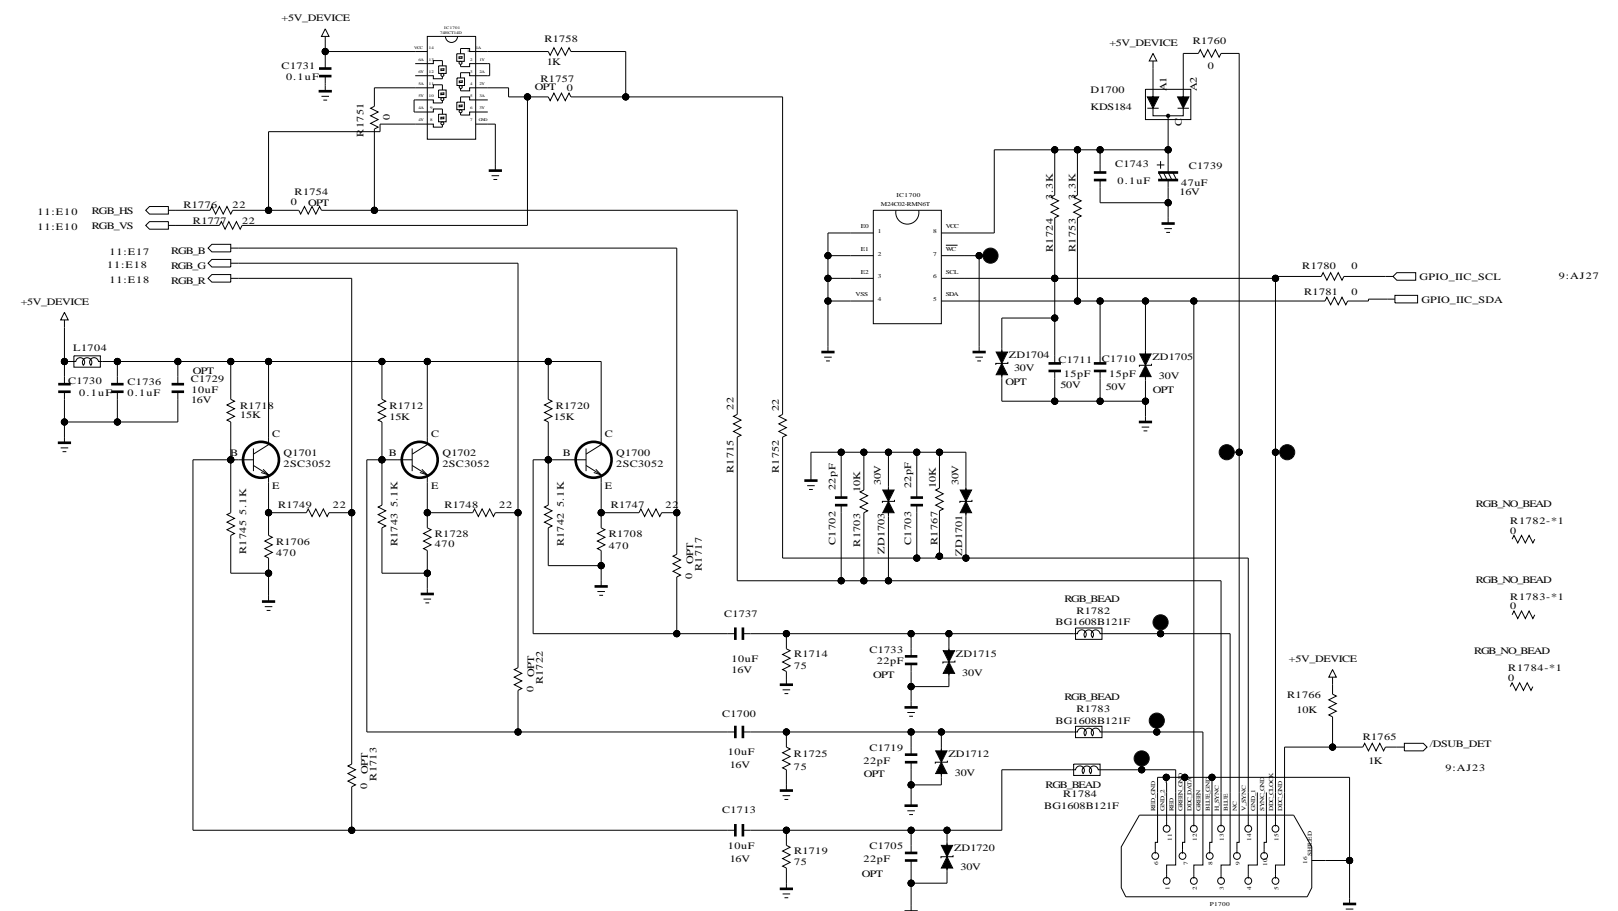
## PC RGB IN




THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET


LG Electronics



MODEL	LV555H-UA	DATE	2010.12.10
BLOCK	EXT_JACK	SHEET	17 / 18

 

LG Electronics

 

MODEL	LV555H-UA	DATE	2010.12.10
BLOCK	b-LAN	SHEET	18 / 18







# xxLD555H-UA Block Diagram

